


JVC

SERVICE MANUAL

MODEL No. **AX-Z1010TN**

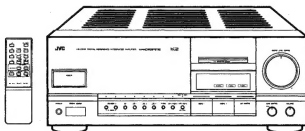

Contents

	Page		
Safety Precautions	1-2	Internal Block Diagrams of Other ICs	1-30
Specifications	1-3	Block Diagram	Insertion
Operating Instructions	1-4	Schematic Diagrams	Insertion
Description of Technology	1-16	Connection Diagram	Insertion
Removal Procedures	1-20	Printed Circuit Boards	Insertion
Adjustment Procedures	1-22	Parts List	Separate Volume Insertion
Description of Major ICs	1-23		

Safety Precautions

1. The design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the product have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage current check (Electric shock hazard testing)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.


- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5 mA AC (r.m.s).

- Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1,500 Ω 10 W resistor paralleled by a 0.15 μ F AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s). This corresponds to 0.5 mA AC (r.m.s).



Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

SPECIFICATIONS

CIRCUITRY

- Pre-amplifier : ICL MCMM equalizer with EL-FETs in its initial stage
- Power amplifier : "DIGITAL PURE A TYPE II" "Dynamic Super-A" power amplifier with Om circuit

OVERALL CHARACTERISTICS

Output power : 180 watts per channel, min. RMS, both channels driven into 8 ohms from 20 Hz to 20 kHz, with no more than 0.004% total harmonic distortion (U.S.A. and Canada only)

505 watts per channel, min. RMS, into 8 ohms at 1 kHz, with no more than 0.002% total harmonic distortion (U.S.A. and Canada only)

100 watts per channel, min. RMS, into 8 ohms at 1 kHz, with no more than 0.002% total harmonic distortion (Continental Europe, the U.K., Australia and other areas)

100 watts per channel, min. RMS, both channels driven, into 8 ohms at 1 kHz with no more than 0.7% total harmonic distortion (DIN) (Continental Europe, the U.K., Australia and other areas)

160 watts 1 kHz, 4 ohms 0.7% (DIN) (Continental Europe, the U.K., Australia and other areas)

Total harmonic distortion

U.S.A. and Canada
(CD IN → SP, OUT) : 0.004% (20 Hz — 20 kHz, 8 ohms) at 100 watts

(PHONO IN → SP, OUT at volume) : 0.009% (20 Hz — 20 kHz, 8 ohms) at 100 watts

Continental Europe, the U.K., Australia and other areas
(CD IN → SP, OUT) : 0.004% (20 Hz — 20 kHz, 8 ohms) at 90 watts

(PHONO IN → SP, OUT at volume) : 0.009% (20 Hz — 20 kHz, 8 ohms) at 90 watts

Intermodulation distortion
U.S.A. and Canada
(CD IN → SP, OUT) : 0.004% (60 Hz : 7 kHz = 4 : 1, 8 ohms) at 100 watts

Continental Europe, the U.K., Australia and other areas
(CD IN → SP, OUT) : 0.004% (60 Hz : 7 kHz = 4 : 1, 8 ohms) at 90 watts

Power band width
(CD IN → SP, OUT) : 5 Hz — 60 kHz (HF, 0.03%, 8 ohms both channels driven)

Frequency response : 5 Hz to 100 kHz, +0 dB, -3 dB/8 ohms

Damping factor : 200 (1 kHz, 8 ohms)

Input sensitivity/impedance (1 kHz)
PHONO (MM) : 4 mV/47 kohms

PHONO (MC) : 300 μ V/470 ohms

CD, LINE 1 : 300 mV/30 kohms

LINE 2, LINE 3, DAT 1/TAPE 2, TAPE 1/DAT 2

Signal to noise ratio

PHONO (MM) : 89 dB/73 dB

PHONO (MC) : 71 dB

CD, LINE 1 : 112 dB/73 dB

LINE 2, LINE 3, DAT 1/TAPE 2, TAPE 1/DAT 2

(B6 HF/DIN)

U.S.A. and Canada only

PHONO (MM) : 82 dB (Rec Out)

PHONO (MC) : 73 dB (Rec Out)

CD, LINE 1 : 86 dB (Speaker Out)

LINE 2, LINE 3, DAT 1/TAPE 2, TAPE 1/DAT 2

(78 HF)

Base control : 0 — +5 dB (50 Hz, MASTER LEVEL -30 dB)

Recording output

Output level : 300 mV/1 kohms

Impedance : (Analog) 2.0 V/1 kohms

(Digital)

DIGITAL INPUT/OUTPUT

DIGITAL-1 : -23 — -14 dBm

DIGITAL-2 : 0.5 Vp-p/75 ohms

DAT REC : 0.5 Vp-p/75 ohms

DAT PLAY : 0.5 Vp-p/75 ohms

D/A CONVERTER SECTION

Sampling : 32 kHz, 44.1 kHz

Frequencies : 48 kHz

(Auto selection)

Total harmonic distortion (1 kHz)

Dynamic range : 96 dB

(1 kHz)

Signal-to-noise ratio : 107 dB

EQUALIZER

PHONO overlevel capacity

PHONO → TAPE 1 REC out (TAPE 1 MONITOR on)

PHONO (MM) : 100 mV (1 kHz, 0.02% THD)

PHONO (MC) : 7 mV (1 kHz, 0.03% THD)

PHONO RIAA deviation

: ±0.2 dB

(20 Hz — 20 kHz)

GENERAL

Dimensions : 435 (W) x 173 (H) x 459 (D) mm

(17-3/16" x 6-13/16" x 18-1/8")

Weight : 16.8 kg (38 lbs)

Design and specifications subject to change without notice

(*measured by JVC Audio Analyzer System)

POWER SPECIFICATIONS

Area	Line Voltage & Frequency	Power Consumption
U.S.A.	AC 120 V ~, 60 Hz	550 watts / 720 VA
Canada		
Continental Europe	AC 220 V ~, 50 Hz	400 watts
U.K.		
Australia	AC 240 V ~, 50 Hz	860 watts
Other areas	AC 110 / 127 / 220 / 240 V ~ selectable, 50/60 Hz	400 watts

CONNECTION DIAGRAM

ANSCHLUSS- DIAGRAMM

DIAGRAMME DES RACCORDEMENTS

CD player
CD-Player
Lecteur de disques compacts
Kompakt diskplayer
Tocadiscos compacto
CD-speler

Tuner
Tuner
Synthesiseur
Tuner
Sintonizador
Tuner

Hi-Fi VCR
Hi-Fi videorecorder
Magnétoscope de haute fidélité
Hi-Fi videorecorder
Grabador de videocassettes
Hi-Fi videocassette player

Hi-Fi VCR
Hi-Fi videorecorder
Magnétoscope de haute fidélité
Hi-Fi videorecorder
Grabador de videocassettes
Hi-Fi videocassette player

DAT deck
DAT Tonbandgerät
Enregistreur audiovisuel
DAT digital deck
Magnéto numérique
Digitalkassetdeck

Tape deck
Kassetdeck
Plateau d'enregistrement
Cassetdeck
Magnétos
Kasset bandspeler

SEA graphic equalizer
Graphiques SEA Equalizers
Égaliseurs graphiques SEA
SEA graphics equalizer
Equalizador grafico SEA
SEA grafiek equalizer




or of
ODR O
ou éber

Turntable
Plattenspieler
Tourn-disque
Deckschall
Tocadiscos
Stereoplaten



Speakers
Lautsprecher
Ensemble acoustique
Lautsprecher
Altoparlantes
Hogesprek

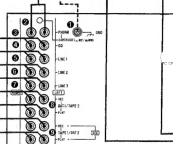

For the USA and Canada
Für die USA und Kanada
Pour les États-Unis et le Canada
Für die USA und Kanada
Para los EE.UU. y Canadá
Für USA und Kanada




Fig. 2
Abb. 2
Afb. 2

For Continental Europe, the U.K., and Australia
Für Europa, Großbritannien und Australien
Pour l'Europe Continentale, le Royaume-Uni et l'Australie
Voor het vasteland van Europa, U.K. en Australië
Para Europa Continental, el Reino Unido y Australia
Für kontinental Europa, Großbritannien und Australien

AANSLUITINGS-
DIAGRAMDIAGRAMA DE
CONEXIONESANSLUTNINGS-
SCHEMA

Speakers
Lautsprecher
Enceintes acoustiques
Lautsprecher
Altoparlantes
Hörlarare



Optical cable
Optikabse
Câble optique
Optischer kabel
Cable optico
Optisk kabel

Coxial cable
Koxialkabel
Câble de coxiale
Koxiale kabel
Cable coaxial
Koxialkabel

CD player
CD-Player
Lecteur de disque compacts
Kompakt diskspeler
Tocadiscos compacts
CD-spelare

CD player etc.
CD-Player etc.
Lecteur de disque compacts etc.
Kompakt diskspeler etc.
Tocadiscos compacts etc.
CD-spelare etc.

DAT deck
DA-Tonabnehmer
Enregistreur audionumérique
DAT digital deck
Magnétodisco digital
Digitalassettdeck

Note:

When connecting a CD player and a DAT deck that will accommodate COMPU LINK, use this switch to select which will be made to accommodate COMPU LINK, a digital system or a analog system.

Hinweis:

Beim Anschluß eines CD-Players und eines DAT-Decks, die mit COMPU LINK kompatibel sind, geben Sie mit diesem Schalter vor, ob die Verbindung durch COMPU LINK über eine digitale oder eine analoge Anlage hergestellt werden soll.

Remarque:

Lors du raccordement d'un lecteur de disque audionumérique et d'une platine DAT qui permettent d'utiliser le système COMPU LINK, régler ce commutateur pour sélectionner le système, numérique ou analogique, qui acceptera COMPU LINK.

Opmerking:

Bij het aansluiten van een CD-speler en DAT-deck geschikt voor COMPU LINK, dient met deze schakelaar het systeem te worden gekozen voor COMPU LINK: digital of analog.


Nota:

Cuando conecte un reproductor de discos compactos y un magnetófono DAT que acomoden el COMPU LINK, utilice este interruptor para seleccionar cuál sistema, el digital o el analógico, será el que acomodará el COMPU LINK.

Ann:

Vid anslutning av en CD-spelare och ett DAT-läsesettdeck med COMPU LINK, skall du använda denna omkopplare för att välja den ljudkälla som skall användas med COMPU LINK: ett digitalt eller analogt system.

Remote cable for "COMPU LINK"
Fernbedienkabel für "COMPU LINK"
Câble de télécommande pour "COMPU LINK"
Afstandsbedieningskabel voor "COMPU LINK"
Cable de mando à distance para "COMPU LINK"
Fjärrstyningsskabel för "COMPU LINK"



For other areas
Andere Gebiete
Pour d'autres pays
Voor andere landen
Para otros países
För andra länder

Fig. 1
Abb. 1
Afb. 1

Fig. 3
Abb. 3
Afb. 3

- ① GND terminal
 - ② Phono selector switch [CARTRIDGE (-) MC ■ MM] — This switch selects between MC and MM type cartridges. When depressed, MC is selected. When returned to the original position MM is selected.
 - ③ PHONO terminals
 - ④ CD terminals
 - ⑤ LINE 1 terminals
 - ⑥ LINE 2 terminals
 - ⑦ LINE 3 terminals
 - ⑧ DAT 1/TAPE 2 terminals
 - ⑨ TAPE 1/DAT 2, SEA terminals
 - ⑩ AC voltage selector*
- When this equipment is used in an area where the supply voltage is different from the preset voltage, reset the voltage selector to the correct position.
- ⑪ FUSE holder*
 - ⑫ SPEAKERS terminals
- Connect the speaker cords following the figures.
- ⑬ AC OUTLETS**
 - ⑭ UNSWITCHED AC outlets
 - ⑮ Power cord
 - ⑯ DIGITAL Terminals:
- DIGITAL 1: Connect the optical digital output of CD player, etc. Connect the attached optical fiber cable after removing the connector cover.
- DIGITAL 2: Connect the coaxial digital output of CD player, etc.
- DAT REC: Connect the digital input of DAT deck.
- DAT PLAY: Connect the digital output of DAT deck.
- Digital coaxial cable: Use 75 ohm coaxial cable with RCA pins at both ends to connect the DIGITAL 2 and DAT terminals.
- ⑰ COMPU LINK-1/SYNCHRO terminals
- Connect to units provided with a COMPU LINK-1/SYNCHRO terminal to let the COMPU LINK control system function.

Note:**• COMPU LINK changeover switch**

When operating an automatic playback or a synchronized recording, be sure to set this switch to the correct position to perform desired operation.

* Not provided on units for the U.S.A., Canada, Continental Europe, the U.K. and Australia.

** Not provided on units for Continental Europe, the U.K. and Australia.

Notes:

1. Switch the power off when connecting any component.
 2. Connect source components with left and right channels connected correctly. Reversed channels may degrade the stereo effect.
 3. Connect speakers with correct polarity: (+) to (+) and (-) to (-). Reversed polarity will degrade the stereo effect.
 4. Connect plugs or wires firmly. Poor contact may result in hum or damage the unit.
 5. Do not connect equipment requiring more than the rated power to the AC OUTLETS on the rear panel.
 6. The AC OUTLETS are not switched off when the front panel power switch is switched off.
 7. If your turntable has a separate ground lead, connect it to the GND terminal.
 8. Use speakers with the correct impedance within the value indicated on the rear panel.
 9. Connection of digital signal cable
- Before connecting the optical cable to the DIGITAL 1 optical input terminal remove the cover from the terminal. Since optical cable is made of plastic or glass material be careful not to bend sharply.
10. When connected by COMPU LINK the cassette deck should be connected to the corresponding TAPE 1/DAT 2 terminals on the amplifier and the DAT deck should be connected to the corresponding DAT 1/TAPE 2 terminals. Although it is possible to connect a cassette deck and a DAT deck with the DAT 1/TAPE 2 terminals and the TAPE 1/DAT 2 terminals respectively, when connecting with an equipment corresponding to COMPU LINK of JVC, do not connect the COMPU LINK cable with the cassette deck or the DAT deck.
 11. When a JVC's CD player is connected by COMPU LINK in digital system, connect to DIGITAL 1 and CD (analog system) terminals of this unit, and set the COMPU LINK changeover switch [CD] to "DIGITAL" position.

FRONT PANEL

1 POWER

Turns the power on and off.
When the power is turned on, the upper indicator will flicker then light.
Power is alternated on and off everytime the button is pressed.

Note:

• Back up circuit

Even if the power is turned off or there is a power failure, the back up circuit will continue to operate and maintain the button settings for about three days. However, after this period has been exceeded the memory circuit will cancel and the button settings will be lost. In this situation press the buttons you want once more.

2 Sampling frequency indicator

In response to a digital signal input a sampling frequency will be displayed in this section.

3 D/A CONVERTER DIRECT

When this button is pressed the indicator will light and a signal from a CD player or some other component connected to the DIGITAL 1 terminal will input directly into the power amplifier. Very high quality HiFi sound reproduction with DIGITAL PURE A TYPE II is achieved.

4 MASTER LEVEL CONTROL

This knob is used to adjust the volume of the speakers or headphones.

5 PHONES (headphone jack)

6 REMOTE SENSOR

This sensor receives the signal transmitted from the remote control unit. When a signal is being received the indicator will light.

7 SPEAKERS

These are the on/off buttons for speakers 1 and 2.

When this button is pressed to on, the indicator above the button will light.

8 Analog input selector

Changes the analog system source connected to the CD, LINE 1-3, PHONO, and DAT 1/TAPE 2 terminals.

When each button is pressed, the indicator above the button will light. When D/A CONVERTER DIRECT or 9 DAT MONITOR is operated, the indicator will be off and the source will be changed to the digital system.

9 TAPE 1/DAT 2 (TAPE 1 & DAT 1)

Turn ON when listening a tape deck connected to the TAPE 1/DAT 2 terminal to replay/record monitor, when using equipment such as a SEA graphic equalizer, or when copying (dubbing) from TAPE 1/DAT 2 to DAT 1/TAPE 2.

When it is turned ON, the MONITOR/COPY indicator above the button will light. The power is alternated ON/OFF everytime the button is pressed. (Even if another source is selected, it will not automatically be turned OFF.)

Since this button (source) has the highest priority of all sources, set it OFF except in the above cases.

10 Digital input selector

This can be used to change the digital system source connected to the DIGITAL 1 and DIGITAL 2 terminals.

When each button is pressed, the indicator above the button will light. When the analog input selector is operated, the indicator will be off and the source will be changed to the analog system.

11 DAT MONITOR

Press this button to on when monitoring playback/recording of a DAT deck connected to the DAT digital terminals. When this button is pressed to on, the indicator above the button will light. ON/OFF is alternated everytime the button is pressed. (Selecting another digital source does not turn it off automatically.)

12 BASS CONTROL

When music volume is turned down the human ear tends to become less aware of bass sound. This can be compensated for by adjusting the bass control knob so that you can enjoy powerful bass even at low sound level.

13 BALANCE

This knob adjusts the volume balance between the left and right speakers. Normally it is set to the center. (When D/A CONVERTER DIRECT is being used this knob will not operate.)


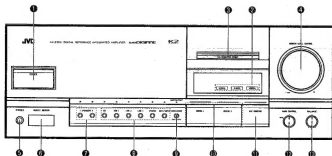


Fig. 4

HOW TO OPERATE



Turn the MASTER LEVEL CONTROL knob down before turning on the power.
Connect the tuner and video components to LINE 1 – 3 respectively in accordance with the diagram on page 5, 6 showing connections.

Drehen Sie den MASTER LEVEL CONTROL-Knopf herunter, bevor Sie den Netzstrom einschalten.
Schließen Sie den Tuner und die Video-Komponenten an die Buchsen LINE 1 – 3 an, wie im Anschlußdiagramm auf Seite 5, 6 gezeigt.

Abaisser le bouton de contrôle de niveau principal (MASTER LEVEL CONTROL) avant de fournir l'alimentation.
Raccorder le syntoniseur et les appareils vidéo à la ligne 1 – 3 (LINE 1 – 3) respectivement suivant le diagramme de page 5, 6 indiquant les raccordements.

What have you selected? / Sound Was haben Sie gewählt? / Klang Quelle / Input, which model? / Quelle			ANALOG INPUT SELECTOR	TAPE 1 / DAT 2 (TAPE 1 ▶ DAT 1)	DIGITAL INPUT SELECTOR	DAT MONITOR
RECORD (Turntable, Plattenspieler, Tourne-disque)			PHONO (MM/MC)	OFF	—	OFF
CD	OUTPUT	OPTICAL DIGITAL	—		DIGITAL 1	
		ANALOG	CD		—	
FM/AM (Broadcast FM/AM-Rundfunksendungen Emission on FM/AM)		LINE 1	—			
VIDEO (Hi-Fi VIDEO, etc.)		LINE 2, LINE 3	—			
TAPE BAND BANDE	OUTPUT	COAXIAL DIGITAL DAT	—	—	ON	
		ANALOG DAT 1/TAPE 2	DAT 1/TAPE 2	—	OFF	
		ANALOG TAPE 1/DAT 2	—	ON		—

Fig. 8

D/A CONVERTER DIRECT switch

When this switch is operated the digital input is received directly by the power amplifier and the balance circuit and source selector circuit are bypassed. The D/A CONVERTER (Digital Analog Converter) output is input directly into MASTER LEVEL CONTROL and very clear high fidelity performance is achieved. Accordingly, when the D/A CONVERTER DIRECT function is on, ANALOG recording and the balance function will not operate.

Notes:

- During the reception of television or FM radio signals, depending on the broadcasting station frequency, noise might appear from digital units such as CD players. In this type of situation, cut off the power to the digital unit.

D/A CONVERTER DIRECT-Schalter

Wenn Sie diesen Schalter betätigen, wird das Digitaleingangssignal direkt vom Endverstärker empfangen, wobei Balance-Schaltkreis und Signalaufwärtsschaltkreise umgangen werden. Der D/A CONVERTER-Ausgang (Digital-Analog-Umsetzer) liegt direkt am MASTER LEVEL CONTROL an, wodurch höchste Hi-Fi-Klangqualität gewährleistet ist. Wenn die D/A CONVERTER DIRECT-Funktion eingeschaltet ist, sind ANALOG-Aufnahmefunktion und Balanceeinstellungsfunktion also nicht aktiv.

Hinweise:

- Während des Empfangs von Fernseh- oder UKW-Signalen können — je nach der Frequenz der Signalquelle — durch Digitalgeräte wie CD-Spieler Geräusche auftreten. In diesem Falle die Stromversorgung zum Digitalgerät abschalten.

Commutateur direct de convertisseur numérique-analogique (D/A CONVERTER DIRECT)

Lorsque ce commutateur est manipulé, l'entrée numérique est directement reçue par l'amplificateur de puissance, et le circuit de balance et le circuit de sélecteur de source sont ignorés. La sortie de convertisseur numérique-analogique (D/A CONVERTER) est directement entrée dans le contrôle de niveau principal (MASTER LEVEL CONTROL), et la reproduction sonore de très haute fidélité est ainsi réalisée. Par conséquent, lorsque la touche de fonction directe de convertisseur numérique-analogique (D/A CONVERTER DIRECT) est sur la position marche, l'enregistrement analogique (ANALOG) et la commande de balance ne s'effectuent pas.

Remarques:

- Pendant la réception de signaux de la télévision ou de la radio FM, selon la fréquence de la station émettrice, le bruit pourrait se produire des appareils numériques tels que le lecteur de disques compacts. Dans une telle situation, couper l'alimentation de l'appareil numérique.

- When pressing DIGITAL INPUT SELECTOR, DAT MONITOR or D/A CONVERTER DIRECT button, while analog system source is selected, there is about 4-seconds blank before switching to digital system source.

Recording

1. Choose either an analog or a digital source that can be heard through the speakers. In this situation a 3 head tape deck connected to the REC terminal of either DAT 1/TAPE 2 or TAPE 1/DAT 2 can receive a recording signal and recording is possible.
Recording level is adjusted from the tape deck, not from the MASTER LEVEL CONTROL. (Please refer to the table on page 17, 19 which shows button settings for various source and recording combinations.)
2. As this amplifier has both DIGITAL and ANALOG type input output terminals for a tape deck a variety of combinations are possible.

- Wenn Sie bei Betrieb eines Analog-systems auf DIGITAL INPUT SELECTOR, DAT MONITOR oder D/A CONVERTER DIRECT umschalten, vergehen etwa 4 Sekunden, bevor das Gerät auf die digitale Tonquelle umschaltet.

Aufnahme

1. Verwenden Sie eine Analog- oder Digital-Signalquelle, die über die Lautsprecher zu hören ist. Ein 3-Tonkopf-Kassetendeck, das an die REC-Anschlußbuchsen von entweder DAT 1/TAPE 2 oder TAPE 1/DAT 2 angeschlossen ist, kann ein Aufnahme-signal empfangen und ermöglicht damit die Aufnahme. Der Aussteuerungspegel wird vom Kassetendeck her kontrolliert und nicht vom MASTER LEVEL CONTROL.
(Bitte beziehen Sie sich auf die Tabelle von Seite 17, 19, wo die verschiedenen Knopf- und Tasteneinstellungen für Signalketten- und Aufnahmekombinationen aufgeführt sind.)
2. Da der vorliegende Verstärker für das Kassetendeck sowohl über DIGITAL- als auch ANALOG-Ein/Ausgangsbuchsen verfügt, sind vielerlei Zusammenstellungen möglich.

- Lorsque le sélecteur d'entrée numérique (DIGITAL INPUT SELECTOR), le bouton de DAT MONITOR ou D/A CONVERTER DIRECT est enfoncé, alors qu'une source de système analogique est sélectionnée, il y a une coupure d'environ 4 secondes avant la commutation sur la source de système numérique.

Enregistrement

1. Choisir une source analogique ou numérique qui peut être écoutée à travers les haut-parleurs. Dans ce cas, une platine d'enregistrement à 3 têtes raccordée à la borne d'enregistrement (REC) du magnétophone audionumérique 1/bande 2 (DAT 1/TAPE 2) ou du bande 1/magnétophone audionumérique 2 (TAPE 1/DAT 2) peut recevoir un signal d'enregistrement, permettant ainsi l'enregistrement. Le niveau d'enregistrement est réglé depuis la platine d'enregistrement, et non pas depuis la commande de niveau sonore principal (MASTER LEVEL CONTROL). (Se référer à la table de page 17, 19 indiquant le réglage des touches pour diverses combinaisons de source et d'enregistrement.)
2. Cet amplificateur est muni des bornes d'entrée/sortie numérique et analogique pour un lecteur de bandes, et diverses combinaisons sont donc possibles.

Which combination? (Welche Kombination?) Quelle Kombination?		Can be heard through Lautsprecher (Speakers) Pouvez l'entendre à l'écoute?		
DIGITAL - OPTICAL		ANALOG INPUT SELECTOR	TAPE 1/DAT 2 (TAPE 1 ▶ DAT 1)	DIGITAL INPUT SELECTOR
DIGITAL 1 (OPTICAL)	DAT (COAXIAL)	Digital recording cannot be made from a CD or other media that has a copy prohibition code included in the digital signal. Digital-Aufnahme von einer CD-Platte oder einer anderen Klangquelle mit Kopierschutzcode in den Digital-Signalen ist nicht möglich. Il n'est pas possible de faire un enregistrement numérique à partir d'un CD ou par un autre moyen comportant un code interdisant tout enregistrement, qui est intégré dans le signal numérique.		
DIGITAL 2 (COAXIAL)	DAT (COAXIAL)	—	—	DIGITAL 2
DIGITAL - ANALOG				
DIGITAL 1 (OPTICAL)	DAT 1/TAPE 2	—	OFF	Select the source you want to record. Die aufzunehmende Klangquelle auswählen. Sélectionner la source désirée.
DIGITAL 2 (COAXIAL)	TAPE 1/DAT 2	—	— (Monitoring is possible when ON.) (Mithören möglich, wenn eingeschaltet.) (Le contrôle est possible lorsque le système est allumé.)	OFF
DAT (COAXIAL)				
	DAT 1/TAPE 2	Recording is impossible. Aufnahme ist nicht möglich. L'enregistrement n'est pas possible.		
	TAPE 1/DAT 2	—	— (Monitoring is possible when ON.) (Mithören möglich, wenn eingeschaltet.) (Le contrôle est possible lorsque le système est allumé.)	ON

Fig. 8

Which combination/ Welche Kombination Quelle Combination		Operation of Monitor Unit Betriebsung des Monitor-Einheit Fonction de Choix de l'Unité			
Radio Cassette - Record-Play Kassettegerät - Aufnahmefunktion CD-Recorder - CDWiedergabe		ANALOG INPUT SELECTION	TAPE 1/DAT 2 (TAPE 1 ▶ DAT 1)	DIGITAL INPUT SELECTION	DAT MONITOR
ANALOG - ANALOG			OFF		
CD LINE 1 LINE 2 LINE 3 PHONE	DAT 1/TAPE 2	Select the source you want to record. Die aufzunehmende Klangquelle auswählen. Sélectionner la source désirée.	— (Monitoring is possible when ON.) (Mithören möglich, wenn eingeschaltet.) (Le contrôle est possible lorsque le système est allumé.)	—	—
DAT 1/TAPE 2	TAPE 1/DAT 2	DAT 1/TAPE 2	— (Monitoring is possible when ON.) (Mithören möglich, wenn eingeschaltet.) (Le contrôle est possible lorsque le système est allumé.)	—	—
TAPE 1/DAT 2	DAT 1/TAPE 2	Select other than DAT 1/TAPE 2. Eine andere als die Position DAT 1/TAPE 2 wählen. Sélectionner autre que DAT 1/TAPE 2.	ON	—	—

Fig. 10

Notes:

- This table shows the status when the D/A CONVERTER DIRECT is off.

Hinweis:

- Diese Tabelle zeigt den Betriebszustand, wenn D/A CONVERTER DIRECT ausgeschaltet ist.

Remarque:

- Ce tableau indique le statut lorsque D/A CONVERTER DIRECT est désactivé.

Notes:

- When recording to a tape deck of analog system, set the D/A CONVERTER DIRECT button to off.
- DAT which is connected to the DIGITAL terminal from the source of the analog system cannot be recorded.
- Regarding CD software and digital signals which have a copy prohibit code in the source, a digital recording cannot be made.
- When monitoring a recording to a 3 head type deck should be connected to TAPE 1/DAT 3 terminals and the TAPE 1/DAT 2 button should be on.
- During synchronized recording, the source is locked to CD or PHONO position to avoid accidental stops or changing to another source.

Hinweise:

- Für Aufnahmen auf das Kassettendeck einer Analoganlage schalten Sie die D/A CONVERTER DIRECT Taste ausgeschaltet ist.
- Wenn der DIGITAL-Anschluss mit der Signalquelle eines Analog-Systems verbunden ist, kann kein DAT-Band aufgenommen werden.
- Wenn CD-Software und digitale Signale mit einer Kopiersperre versehen sind, kann keine digitale Aufnahme durchgeführt werden.
- Wenn die Aufnahme auf ein 3-Tonkopfkassettendeck mit der Monitor-Funktion überwacht werden soll, sollte das Kassettendeck an die TAPE 1/DAT 2-Anschlüsse angeschlossen werden und der TAPE 1/DAT 2 Schalter eingeschaltet sein.
- Bei Synchro-Aufnahme wird die Signalquelleneinstellung für CD oder PHONO verriegelt, so dass unbeabsichtigte Unterbrechungen oder Umschaltung auf andere Signalquellen vermieden werden.

Remarques:

- Lors d'un enregistrement vers un magnétocassette de système analogique, régler la touche D/A CONVERTER DIRECT sur la position désactivée.
- Il est impossible d'effectuer l'enregistrement du magnétophone audionumérique raccordé à la borne numérique (DIGITAL) de la source du système analogique.
- Pour les signaux des logiciels ou numériques du disque compact/diaque compact vidéo (CD) comportant un code d'interdiction de copie dans la source, il est impossible d'effectuer l'enregistrement numérique.
- Lors du contrôle d'un enregistrement pour une platine d'enregistrement à 3 têtes (3 head tape deck), la platine doit être raccordée aux bornes de bande 1/magnétophone audionumérique 2 (TAPE 1/DAT 2), et le commutateur du moniteur de bande 1/magnétophone audionumérique 2 (TAPE 1/DAT 2) doit être mis sur la position marche.
- Pendant l'enregistrement synchronisé, la source est verrouillée à la position CD ou PHONO pour éviter des arrêts accidentels ou de changer de source.

Digital Pure A TYPE II

If an amplifier is equipped with the built-in D/A converter, "signal time base control" becomes easy owing to the special characteristics of digital signals.

Utilization of this special characteristics allows an amplifier to perform optimal A class operation. Although this A class operation can be said to be the ideal type for amplifiers, for an A class amplifier with mass output, even at low level restart, a mass current was always flowing to the power unit. This caused a remarkable loss in the power unit and generated unnecessary heat.

Digital Pure A Type II realizes the effective ideal A class operation to curb unnecessary heat from the low level to the high level consisting of three blocks by varying the operation current in the power unit to the optimum level for each signal.

Accordingly, a relaxing yet powerful and silk-like smooth sound quality can be enjoyed.

Time Base Processor by memory time shift circuit ②

Arranged just before the D/A converter to slightly shift the time axis of the input digital signal.

Prediction Signal Processor ③

Creates a prediction signal from the input digital signal based on the information obtained from the input signal to the time base processor, and outputs an operation point control signal grounded on the created prediction signal.

Programmable Bias Current Controller ④

Receives the control signal in ③, alters the idling current by the optical BIAS circuit and leads to the Hi-Power Pure A class operation to curb unnecessary heat.

- ① Input
- ② Time base processor
- ③ D/A converter
- ④ VOLUME
- ⑤ Power amplifier
- ⑥ Output
- ⑦ Prediction signal processor
- ⑧ Programmable bias current controller

COMPU LINK REMOTE CONTROL SYSTEM

The COMPU LINK REMOTE CONTROL SYSTEM was developed by JVC. You can control each COMPU LINK component from the remote control unit, and also perform the following advanced operations with ease.

Automatic source selection

If the remote cable is used to connect this unit to other JVC components with COMPU LINK-18VNC-CHRD terminals. By pressing the remote control unit source selector button or the play button of each connected equipment, the source changeover and regenerated start can be performed automatically.

When switching from one component to another, such as a cassette deck, turntable or CD player, the previous component will stop playing after about five seconds.

Synchronized recording

Synchronized recording refers to the process whereby a cassette deck automatically commences recording, in synchronization with the CD player or turntable.

Set the cassette deck to the REC/PAUSE mode according to the procedures in the instruction manual.

When synchronously recording the CD player, push the PLAY button on the CD player. The cassette deck enters the record mode the moment the CD player starts and synchronized recording commences.

Synchronized recording stops automatically when the CD player stops playing.

To cancel synchronized recording, push the STOP button of the CD player, turntable or cassette deck.

Note:

- When operating a CD player or a DAT deck, select analog or digital system by the COMPU LINK changeover switch of this unit. If the switch is set to the wrong position, desired operation cannot be performed.

COMPU LINK
Remote Control System




Fig. 12

REMOTE CONTROL UNIT (RM-SA1010U)

Batteries

• How to install the batteries (Fig. 13)

1. Remove the battery cover by sliding the cover of the battery case in the direction of the arrow.
2. Install the provided batteries ("AA": UM-3, R6, 1.5 V), with their polarities properly placed. Positive and negatives facing the correct direction.
3. Re-install the battery cover.

• Battery life

The batteries can be used for an average of 1 year.

• Battery replacement time

When the distance at which the remote control unit functions begins to decrease, replace the batteries ("AA": UM-3, R6, 1.5 V).

To operate the amplifier with the remote control unit (RM-SA1010U) point it towards the "REMOTE SENSOR" and press the buttons you want. The remote control unit will activate the amplifier within a range of about 7 meters (23 ft). If the remote control unit is operated while being held at an oblique angle the effective range will be reduced. Try to point the unit directly towards the REMOTE SENSOR of the amplifier.




Fig. 13




Fig. 14

DESCRIPTION AND FUNCTIONS

1 D/A CON. DIRECT

When this button is pressed the indicator will light and with DIGITAL PURE A TYPE II a CD player or some other component connected to the DIGITAL INPUT terminal will be heard in very high grade HFI sound.

2 Source Selector

(Digital type)

(Unit connected by COMPU LINK can be automatically operated using the remote control unit.)

DIGITAL 1: Press this button to play a unit connected to the DIGITAL 1 terminal.

DIGITAL 2: Press this button to play a unit connected to the DIGITAL 2 terminal.

DAT MONITOR: Press this button to monitor a recording or to play the DAT deck connected to the DAT terminal on the amplifier. If pressed again the function will stop.

3 Source Selector

(Analog type)

(Unit connected by COMPU LINK can be automatically operated using the remote control unit.)

CD: To play the CD player press the CD button on the remote control unit.

PHONO: To play the turntable press the PHONO button on the remote control unit.

LINE 1: Press the LINE 1 button to play a unit connected to the LINE 1 terminals on the amplifier.

LINE 2: Press this button to play a unit connected to the LINE 2 terminals on the amplifier.

LINE 3: Press this button to play a unit connected to the LINE 3 terminals on the amplifier.

DAT 1/TAPE 2: Press this button to play a unit connected to the DAT 1/TAPE 2 terminals.

T 1/2 2 MON, T 1/2 1 D 1 COPY: Press this button to monitor playback/recording of a tape deck connected to TAPE 1/DAT 2 terminals, or when using SEA graphic equalizer, or when copying (dubbing) from TAPE 1/DAT 2 to DAT 1/TAPE 2.

4 SPEAKERS

These are the on/off buttons for speakers 1 and 2.

5 MASTER LEVEL

-1: As this button is being pressed the MASTER LEVEL CONTROL knob will slowly turn counterclockwise and the volume will be reduced.

+1: As this button is being pressed the MASTER LEVEL CONTROL knob will slowly turn clockwise and the volume will be increased.

6 FADE MUTE


When this button is pressed the MASTER LEVEL CONTROL knob will turn down and the sound will be softened. (Each time the button is pressed the sound will be further reduced.)

USING S.E.A. GRAPHIC EQUALIZER/ PROCESSOR

To enjoy full SOUND FIELD control and TONE adjustment you can connect a SEA graphic equalizer or a DAP (Digital Acoustics Processor) to the TAPE 1/DAT 2 terminals of the amplifier.


Note:

- When the D/A CONVERTER DIRECT function is on, the SEA graphic equalizer connection will not operate.

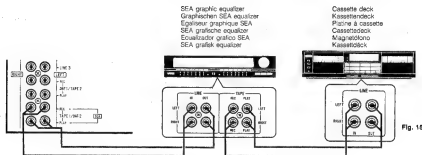

■ Connecting to SEA (Fig. 15)

- When operating SEA or playing back a deck connected to SEA, turn on the TAPE 1/DAT 2 button and turn off the D/A CONVERTER DIRECT button of this unit.

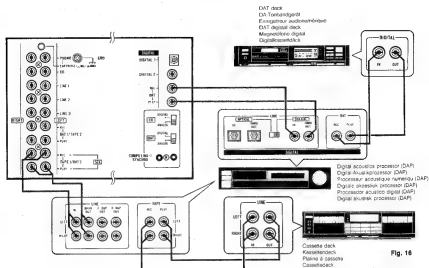

■ Connecting to processors (Fig. 16)

Connecting to a JVC's DAP

- When operating DAP or playing back a deck connected to DAP, operate the button of this unit as follows.

Digital connection:

DAT MONITOR button → on

TAPE 1/DAT 2 button → off

Analog connection:

TAPE 1/DAT 2 button → on

DIA CONVERTER DIRECT button → off

- When connecting this unit to a JVC's DAP, set the OFFS DELAY parameter of the DAP as follows.

Input source of this unit Eingangssignal des Geräts Source d'entrée de cet appareil	OFFS DELAY setting value of DAP OFFS DELAY Einstellwert des DAP Valeur de réglage OFFS DELAY du DAP		
DIGITAL	fs 48 kHz 10 ms	fs 44.1 kHz 10 ms	fs 32 kHz 10 ms
ANALOG	0 ms		

TROUBLESHOOTING

Check the following points before calling for repairs.

There is a difference between the sound level from the record player and the level from another source.

The MM/MC type cartridge selector switch is not set in the correct position.

- Set the selector switch on the back of the amplifier correctly.

No sound output

Erroneous cable connection

- Correct the connection.
- The input selector switch is not in the right position.
- Set switch in the correct position.

The TAPE 1/DAT 2 switch is in the "on" position.

- Press the TAPE 1/DAT 2 button so that the indicator light goes off.

Speaker line are disconnected.

- Check connections between the back of the amplifier and the speakers.

Sound is only coming from one speaker.

The lines going to a speaker are disconnected.

- Check connections between the speakers and the back of the amplifier.

The BALANCE knob is turned completely to one side.

- Return the BALANCE knob to the center.

When the volume is turned up while listening to a record there is a booming sound.

The record player is picking up vibrations from the speakers. (howling)

- Move the speakers well away from the record player and place the record player on a firm base.

Description of Technology

1. Digital Pure-A


The "Digital Pure-A" is an operation system materialized based upon the new concept of "signal prediction". In a conventional digital amplifier, the input digital signal is decoded by the built-in digital decoder and is applied to the D/A converter as it is. In the "Digital Pure-A", however, the input digital signal is once stored in a memory circuit and, after the large lapse of a certain period, is output to the D/A converter, in which way the signal is delayed so that signal prediction is thus made possible by the preceding signal. In the AX-Z1010TN, the Digital Pure-A operation is performed by varying the bias current according to the level of the signal preceding 10 msec.

2. Prediction Signal Generation Circuit


(1) Preceding signal (H.O, DZ)

Of the serial data output from pin 17 of IC106 (YM3623B), two bits of MSB and 2SB are latched by IC261 in to an EX-OR circuit, the output of which becomes "H" when the playback signal level exceeds -6 dB and is held at C262 on the way for a certain time and is emitted from pin 1 of J403. (Half Over signal)

In addition, concurrently with this, the serial data is held at C269 for a certain time and is emitted from pin 3 of J403. (Digital Zero signal)

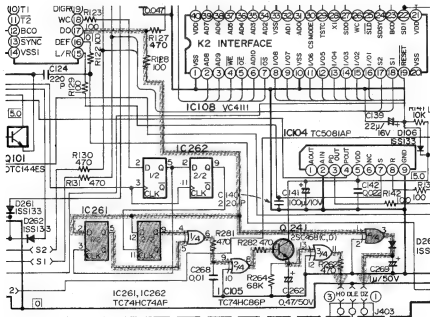

Then, by these two signals, judgement is made as to at which level the musical signal is.



(2) Delay signal (Vb)

The time base processor (IC108) writes in a 16-Kbyte SRAM the serial data sent from the digital interface receiver and at the same time reads the serial data which has been delayed 10 msec and outputs this delayed serial data to the D/A converter.

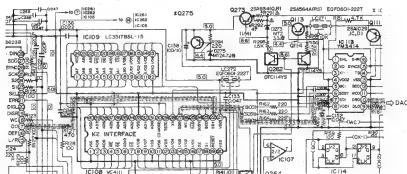


Figure 2. Delay Circuit

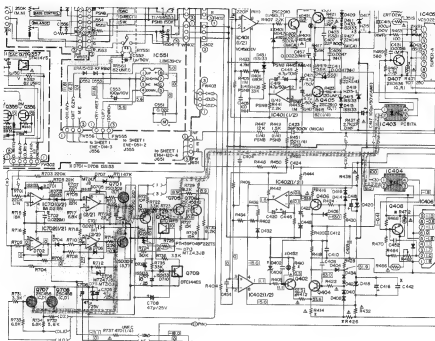


Figure 4. Judgement Circuit and Bias Current Control

Removal Procedures

■ Removing the Top Cover

1. Remove the four screws from the top plate, then the eight screws, each four from either side, and the three screws from the rear side.
2. Lift up off the top cover gently by its rear section. (Figure 1)

■ Removing the Front Panel

1. Remove the top cover.
2. Detach the volume control knob.
3. Remove the two plastic rivets fixing the bracket of the indicator board (ENE-051-4), then also the two plastic rivets for ENE-015-5.
4. Remove the six screws fixing the front panel (three from its upper side and the other three from its lower side).

■ Removing the Front PC Board and the Key Input PC Board

1. Remove the front panel.
2. Disconnect the flat wires from connectors J905, J903 and J906 on the front PC board.
3. Remove the six plastic rivets fixing the front PC board and the key input PC board.

Note: Before disconnecting the flat wires, be sure to unlock the connectors.

■ Disconnecting the Protector PC Board

1. Remove the five foot pieces from the bottom cover.
2. Remove the twenty five screws of the bottom cover, then take out the bottom cover.
3. Disconnect all the flat wires from the connectors on the protector PC board.
4. Remove the four screws fixing the protector PC board. (Figure 2)

■ Disconnecting the Power Supply PC Board and Removing the Sub Heat Sink

1. Remove the top cover.
2. Remove the protector PC board.
3. Disconnect the cables fastened round the soldering face of the power supply PC board.
4. Remove the four screws fixing the power supply PC board.
5. Unsolder the sub heat sink from the power supply PC board. (Figure 3)

■ Removing the DAC PC Board

1. Remove the top cover.
2. Remove the bottom cover.
3. Remove the five screws, then release the cable from the four wire bundle bands, and detach the shield cover.



Figure 1.

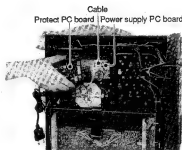


Figure 2.

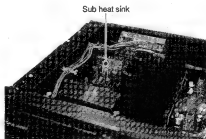


Figure 3.

4. Remove the three screws of the rear panel holding the DAC PC board.
5. Disconnect all the flat wires from the connectors on the DAC PC board.
6. Remove the six plastic rivets fixing the DAC PC board to the chassis.

■ Disconnecting the Analog Input PC Board

1. Remove the top cover.
2. Remove the bottom cover.
3. Remove the five screws fixing the pin jacks on the rear panel.
4. Disconnect the flat wires from the connectors on the analog input PC board.
5. Remove the two plastic rivets and detach the analog input PC board from the chassis. (Figure 4)

Note: For reinstalling the board, it seems difficult to insert the plastic rivets into the board as they were. In that case, insert them from the side frame.

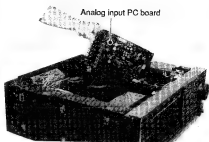


Figure 4.

■ Disconnecting the Motor Control Input Board

1. Remove the front panel.
2. Detach the bass control and balance control knobs.
3. Remove the nut and screw fixing the shaft of the volume control.
4. Remove two screws fixing the shield plate to the chassis.
5. Remove two plastic rivets fixing the board to the bracket.
6. Disconnect the flat wire from the connector on the motor control input board, and unsolder FW552. (Figure 5)

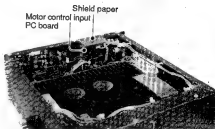


Figure 5.

■ Disconnecting the Power Amplifier PC Board and the Power Transistors

1. Remove the top cover.
2. Remove the bottom cover.
3. Remove the eight screws fixing the power amplifier PC board and the heat sink to the heat sink bracket.
4. Unsolder the eight power transistors.
5. Remove the eight nuts fixing the power transistors by a wrench.

■ Disconnecting the Relay PC Board

1. Remove the top cover.
2. Remove the bottom cover.
3. Remove the twenty three screws and take out the rear panel. (Figure 6)



Figure 6.

Adjustment Procedures

■ Power Amplifier Adjustment (Idling Adjustment)

• Idling current adjustment VRs

L-ch ... R461


R-ch ... R462

• Idling current detection voltage check points

L-ch ... TP401 pin ⑤ and pin ④ (Pin ⑤ is the negative side.)

R-ch ... TP401 pin ① and pin ② (Pin ① is the negative side.)


- 1) Rotate idling VRs (R461, R462) fully counterclockwise.
- 2) Set the power switch to ON.
- 3) Adjust R461 and R462 so that each voltage becomes the following value.
 After one minute 5mV
 When stabilized (after 10 minutes) 10mV

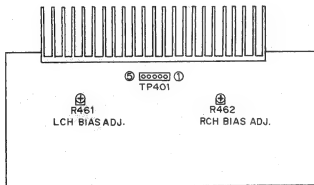

Description of Major ICs

■ TORX172 (J101): Optical Receiving Module

(1) Circuit Configuration

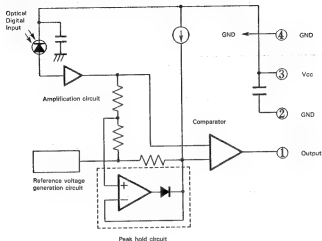

(2) Circuit Description

When an optical signal is input to the SI-PIN photodiode, a current flows with a sensitivity of 0.3 A/W ($\lambda_p = 650$ nm) or less. This current is impedance-converted and amplified by the amplifier circuit, and the resulting signal voltage is input to the comparator.

On the other hand, the reference voltage of the comparator is given by the ATC (Automatic Threshold Control) circuit. The ATC circuit is made up of a peak hold circuit which detects the peak value of the input voltage and holds this peak value for a certain period. The period during which the peak value is held is known as the "time constant". It is set to 1–3 μs in case of "Toslink".

The signal voltage from the amplifier circuit is divided in two by a resistor and is input to the peak hold circuit. Thus, the comparator performs a comparison between the output voltage of the amplifier circuit and the peak value that is 1/2 the output voltage.

By virtue of this, the comparator output can accurately reproduce the signal transmitted from the optical transmission module of the transmitter at any time, even when the optical input varies.

Moreover, since the reference voltage generation circuit is provided to keep the output voltage at the same level as the voltage output of the amplifier circuit when there is no optical input, so that the reference voltage varies according to the temperature drift in the amplifier circuit to minimize the change in property due to the temperature variation.


In addition, a constant current power supply is provided and the reference voltage of the comparator is set slightly higher than the output voltage of the reference voltage generation circuit so that the transmission is made accurately even under the condition that there is no optical input for a long period.

YM3623B (IC106): Digital Audio Interface Receiver


(1) Function

- 1) A PLL circuit is incorporated to synchronize with a digital signal (conforming to the Digital Audio Interface Format) which is transmitted from the outside. Therefore, the sampling frequency is followed up automatically.
- 2) This outputs the audio signal with its MSB first. In synchronism with it, this outputs the timing clock for sampling and holding the D/A output, the L-channel and R-channel signals.
- 3) Since this is provided with pins to output the subcode, it is feasible to pick up the subcode.
- 4) This can output the sampling frequency, the copy enable signal, and the signals indicating the presence/absence of emphasis and the existence/nonexistence of error in the audio signal transmitted.
- 5) When an error is detected in a digital signal conforming to the Digital Audio Interface Format, the previous audio data is output again.

(2) Appearance

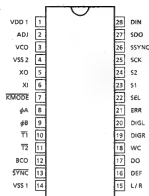

(3) Block Diagram

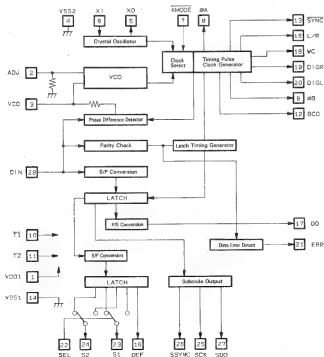

(4) Pin Description

Any pin accompanied by "(PU)" is pulled up internally.

Pin No.	Pin Name	V/O	Function
1	VDD		System power supply (+5V)
2	ADJ	I	VCO oscillation frequency adjustment pin. No. connection
3	VCO	I/O	Externally connected capacitor pin for VCO circuit
4	VSS2		GND pin for VCO circuit. Connected in common with VSS1. They are not common inside the LSI.
5	XO	O	Ceramic oscillator pin (18.00 MHz)
6	XI	I	Ceramic oscillator pin
7	KMODE	I(PU)	H: Activates the PLL circuit when a signal is input to the DIN pin. Operates on the ceramic oscillator when no signal is input to the DIN pin. L: Operates on the ceramic oscillator independent of the state of the DIN pin.
8	ϕA	O	18.00 MHz when the ceramic oscillator is engaged. When the PPL circuit is engaged, the frequency varies according to the data rate of the signal input to the DIN pin. (Approx. 16.9344 MHz when $f_s=44.1$ kHz)
9	ϕB	O	1/3 divided ϕA when the ceramic oscillator is engaged. When the PPL circuit is engaged, the frequency varies according to the data rate of the signal input to the DIN pin. (Approx. 5.6448 MHz when $f_s=44.1$ kHz)
10	T1	I(PU)	Internal circuit check pin
11	T2	I(PU)	Internal circuit check pin
12	BCO	O	Timing clock of signal output from DO pin
13	SYNC	O	Sync signal
14	VSS1	O	System GND
15	L/R	O	H: Indicates that the L-channel data is output from the DO pin. L: Indicates that the R-channel data is output from the DO pin.
16	DEF	O	H: Indicates that the input data has been emphasized. L: Indicates that the input data has not been emphasized.
17	DO	O	16-bit data output
18	WC	O	Indicates that the data is output to the DO pin.
19	DIGR	O	R-channel deglitch signal
20	DIGL	O	L-channel deglitch signal
21	ERR	O	H: Indicates a parity error, or operation on the ceramic oscillator. L: Indicates no error.
22	SEL	I(PU)	Refer to the table below.
23	S1	O	Refer to the table below.
24	S2	O	Refer to the table below.
25	SCK	O	Clock for subcode output
26	SSYNC	O	Signal for subcode
27	SDO	O	Subcode data output pin
28	DIN	I(PU)	Data input pin

*Concerning S1, S2 and SEL:

The S1 and S2 pins have a multiplied output function.


The S1 and S2 outputs are changed by switching the SEL pin input.

Input	Output		Output	
SEL	S1	Function	S2	Function
L	L	Copy inhibit	L	CD (other than DAT)
	H	Copy enable	H	DAT
H	L		L	DIN input signal's sampling frequency 44.1 kHz
	L		H	48 kHz
	H		H	32 kHz
	H		L	—


As shown above, the required data is picked up from the input digital signal conforming to the Digital Audio Interface Format and output to the S1 and S2 pins.

■ VC4111 (IC108): K2 Interface and Delay Circuit

(1) Appearance

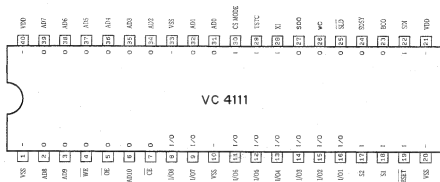

(2) Internal Block Diagram

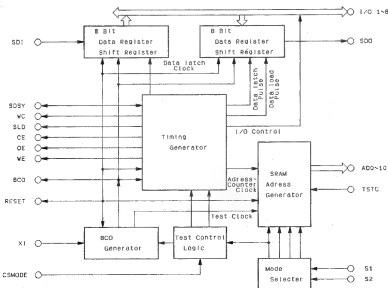


(3) Pin Description

3) Pin Description


Pin No.	Pin Name	I/O	Function															
1	VSS	—	GND															
2	AD8	O	SRAM memory address signal output pins															
3	AD9	O																
4	WE	O																
5	OE	O	SRAM memory OE signal output pin															
6	AD10	O	SRAM memory address signal output pin															
7	CE	O	SRAM memory CE signal output pin															
8	I/O8	I/O	SRAM memory data signal I/O pin															
9	I/O7	I/O																
10	VSS	—	GND															
11	I/O6	I/O	SRAM memory data signal I/O pins															
12	I/O5	I/O																
13	I/O4	I/O																
14	I/O3	I/O																
15	I/O2	I/O																
16	I/O1	I/O																
17	S2	I	LSI operation mode select input pin															
18	S1	I(CMOS)																
<table> <tr> <th>S2</th> <th>S1</th> <th>Selection</th> </tr> <tr> <td>L</td> <td>L</td> <td>Fs = 44.1 kHz selected</td> </tr> <tr> <td>L</td> <td>H</td> <td>Test mode</td> </tr> <tr> <td>H</td> <td>L</td> <td>Fs = 48 kHz selected</td> </tr> <tr> <td>H</td> <td>H</td> <td>Ps = 32 kHz selected</td> </tr> </table>				S2	S1	Selection	L	L	Fs = 44.1 kHz selected	L	H	Test mode	H	L	Fs = 48 kHz selected	H	H	Ps = 32 kHz selected
S2	S1	Selection																
L	L	Fs = 44.1 kHz selected																
L	H	Test mode																
H	L	Fs = 48 kHz selected																
H	H	Ps = 32 kHz selected																
19	RESET	I(CMOS)	LSI reset input pin. The LSI is initialized with RESET "L".															
20	VSS	—	GND															
21	VDD	—	Supply voltage															
22	SDI	I(CMOS)	Serial data input pin. The data synchronized with the fall of the BCO clock is input in the MSB first mode.															
23	BCO	O(CMOS)	Serial data shift clock output pin															
24	SDSY	O(CMOS)	Fs signal (sampling frequency) output pin															
25	SLD	O	At the rise of the WC output signal, outputs an "L" signal with a width of two clock pulses in synchronization with the rise of the BCO clock.															
26	WC	O	Outputs the 2Fs signal synchronized with the Fs signal.															
27	SDO	O	Serial data output pin Outputs the serial data previous 10 msec and read from the SRAM, in the MSB first mode in synchronization with the fall of the BCO clock.															
28	XI	I(CMOS)	Clock input pin															
29	TSTC	I(CMOS)	Input pin to select the test status of the address counter in the LSI when the test mode is engaged.															
30	CS MODE	I(CMOS)	Input pin to select the LSI operating condition.															
31	AD0	O	SRAM memory address signal output pins															
32	AD1	O																
33	VSS	—	GND															
34	AD2	O	SRAM memory address signal output pins															
35	AD3	O																
36	AD4	O																
37	AD5	O																
38	AD6	O																
39	AD7	O																
40	VDD	—	Supply voltage pin															

YM3414 (IC113): Octuple Oversampling (18-bit resolution) - Digital Filter

(1) Appearance

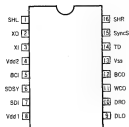

(2) Internal Block Diagram

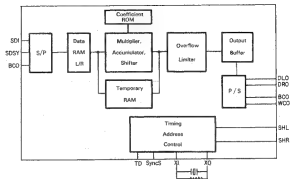

(3) Pin Description

Pin No.	Pin Name	I/O	Function
1	SHL	O	When operating with 1 D/A converter (TD="L"): L-channel deglitcher signal (for quadruple mode) When operating with 2 D/A converters (TD="H"): L/R-channel deglitcher signal (for octuple mode)
2	XO	O	Crystal oscillates between XI-XO.
3	XI	I	16.9344 MHz (External clock can also be input directly.)
4	Vdd2	—	+5V power supply pin for crystal oscillator and deglitcher signal
5	BCI	I	Input data bit clock input pin
6	SDSY	I	Input data L-channel input timing clock input pin
7	SDI	I	Data input pin
8	Vdd1	—	+5V power supply pin for digital signal system
9	DLO	O	When operating with 1 D/A converter (TD="L"): L/R-channel data output in (for quadruple mode) When operating with 2 D/A converters (TD="H"): L-channel data output pin (for octuple mode)
10	DR0	O	R-channel data output pin
11	WCO	O	Word clock for output data DLO and DR0
12	BCO	O	Output data bit clock
13	Vss	—	GND pin
14	TD	I	1 DAC/2 DACs select pin. 1 DAC (for quadruple mode)="L", 2 DACs (for octuple mode)="H"
15	SyncS	I	Day sync input (jitter absorption sync signal (Syncs="H": complete sync input, Syncs="L": SDSY inhibit)
16	SHR	O	R-channel deglitcher signal when operating with 1 DAC

■ **μPD75104CW-150 (IC901): System Control Microcomputer**


1	1	64	Connected to GND
2	2	63	"CompuLink" signal output
3	3	62	Volume indicator output
4	4	61	Volume down control output
5	5	60	Volume up control output
6	6	59	LINE1 (TUNER) input select display output
7	7	58	PHONO input select display output
8	8	57	TAPE/TAPE2 input select display output
9	9	56	LINE2 input select display output
10	10	55	CDCDV input select display output
11	11	54	LINE3 (AUX) input select display output
12	12	53	DAT/DAPE3 input select display output
13	13	52	DIGITAL/CDD OPT display output
14	14	51	AUX (DIGITAL3) display output
15	15	50	DATA (DIGITAL3) display output
16	16	49	DAC DIRECT input select display output
17	17	48	Connected to GND
18	18	47	Oscillator connection pin
19	19	46	Oscillator connection pin
20	20	45	Reset signal input
21	21	44	Power indicator output
22	22	43	Sampling frequency 48 kHz display output
23	23	42	Sampling frequency 44 kHz display output
24	24	41	Sampling frequency 32 kHz display output
25	25	40	Speaker 1 indication, select output
26	26	39	Speaker 2 indication, select output
27	27	38	Digital (source) input select
28	28	37	DS1 HDMT MONITOR, L SOURCE selected by DS2
29	29	36	DS2 to AUX, LCD
30	30	35	Narrow control indicator output
31	31	34	Digital power ON/OFF select output
32	32	33	Connected to GND
33	33	32	Connected to GND
34	34	31	Connected to GND
35	35	30	Connected to GND
36	36	29	Connected to GND
37	37	28	Connected to GND
38	38	27	Connected to GND
39	39	26	Connected to GND
40	40	25	Connected to GND
41	41	24	Connected to GND
42	42	23	Connected to GND
43	43	22	Connected to GND
44	44	21	Connected to GND
45	45	20	Connected to GND
46	46	19	Connected to GND
47	47	18	Connected to GND
48	48	17	Connected to GND
49	49	16	Connected to GND
50	50	15	Connected to GND
51	51	14	Connected to GND
52	52	13	Connected to GND
53	53	12	Connected to GND
54	54	11	Connected to GND
55	55	10	Connected to GND
56	56	9	Connected to GND
57	57	8	Connected to GND
58	58	7	Connected to GND
59	59	6	Connected to GND
60	60	5	Connected to GND
61	61	4	Connected to GND
62	62	3	Connected to GND
63	63	2	Connected to GND
64	64	1	Connected to GND

μPD75104CW-150


1	1	64	Connected to GND
2	2	63	"CompuLink" signal input
3	3	62	Prescaler circuit operation sensing input
4	4	61	Remote control operation sensing input
5	5	60	Power OFF detection
6	6	59	Connected to GND
7	7	58	Connected to GND
8	8	57	Connected to GND
9	9	56	Connected to GND
10	10	55	Digital ICDCDV input select display output
11	11	54	Digital (DAT) input select display output
12	12	53	Digital delay ON signal output
13	13	52	DAC muting signal output
14	14	51	Analog signal muting signal output
15	15	50	Shuttle output to IC361
16	16	49	Connected to GND
17	17	48	Data output to IC361
18	18	47	Clock output to IC361
19	19	46	Connected to GND
20	20	45	Connected to GND
21	21	44	Connected to GND
22	22	43	Signal input from IC106 (YM98238)
23	23	42	Signal input from IC106 (YM98238)
24	24	41	Signal input from IC106 (YM98238)
25	25	40	Key matrix output
26	26	39	Key matrix output
27	27	38	Key matrix output
28	28	37	Key matrix output
29	29	36	Key matrix input
30	30	35	Key matrix input
31	31	34	Key matrix input
32	32	33	Key matrix input
33	33	32	Key matrix input
34	34	31	Key matrix input
35	35	30	Power supply pin

Internal Block Diagrams of Other ICs

■ LC3517BSL-15 (IC109): Static RAM

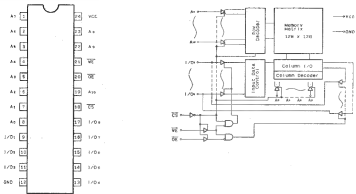

■ PCM56P (IC201, IC202): D/A converters

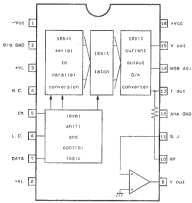


■ SN74LS624N (IC110): Voltage Controlled Oscillator (VCO)


(1) Pin Connections




(2) Block diagram




■ LB1639-CV (IC551): Motor Driver

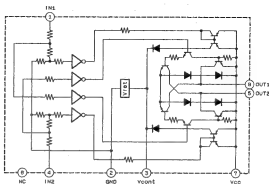

■ VC5022-2 (IC405, IC406): Super-A ICs

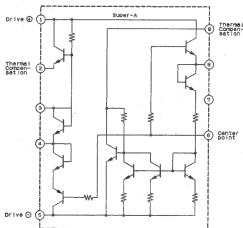


■ μ PC1237HA (IC551): Protector

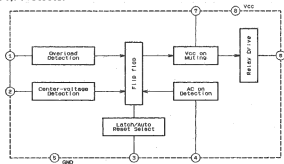


■ TC74HC04P (IC101): CMOS Inverter

(1) Pin Connections

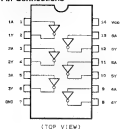


(2) Block Diagram




■ TC74HC00P (IC102, IC103): CMOS 2-Input NAND Gates

(1) Pin Connections

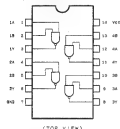


(2) Block Diagram




■ TC74HC86P (IC105): CMOS Exclusive OR Gates

(1) Pin Connections

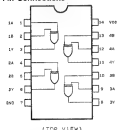


(2) Block Diagram



■ TC74HC74P (IC114, IC115, IC116, IC261, IC262): CMOS D Type Flip-flops

(1) Pin Connections

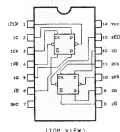


(2) Truth Table

INPUTS				OUTPUTS		FUNCTION
CLR	PR	D	CK	Q	\bar{Q}	
L	H	X	X	L	H	CLEAR
H	L	X	X	H	L	PRESET
L	L	X	X	H	H	—
H	H	L	L	L	H	—
H	H	H	L	H	L	—
H	H	X	L	Q_n	\bar{Q}_n	NO CHANGE

X : Don't care

■ TC74HC123P (IC263): CMOS 2-circuit Monostable - Multivibrator

(1) Pin Connections

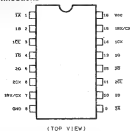

(2) Truth Table


INPUTS			OUTPUTS		NOTE
A	B	CL	Q	Q	
	H	H			OUTPUT ENABLE
X	L	H	L	H	INHIBIT
H	X	H	L	H	INHIBIT
L		H			OUTPUT ENABLE
L	H				OUTPUT ENABLE
X	X	L	L	H	INHIBIT

X : Don't care


■ TC5081AP (IC104): Phase Detector for PLL Frequency Synthesizer Phase

The phase comparator detects the difference in phase between two input pulses and outputs a negative or positive pulse proportional to this detection to the PD OUT pin.


(1) Pin Connections



(2) Logic Diagram

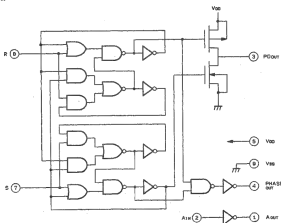

(3) Phase Comparator Timing Chart



MEMO

MEMO



JVC

VICTOR COMPANY OF JAPAN LIMITED
AUDIO PRODUCTS DIVISION, YAMATO PLANT, 1644, SHIMOTSURUMA, YAMATO-SHI, KANAGAWA-KEN, 242, JAPAN

[No. 20115]




Printed in Japan
8908 (G)

PARTS LIST


Contents

Exploded Views and Parts List.....	2-3
Printed Circuit Board Ass'y and Parts List.....	2-7
■ ENP-014 □ Digital & Power PC Board Ass'y.....	2-7
■ ENE-051 □ Equalizer & Microcomputer PC Board Ass'y.....	2-11
■ END-056 □ Power Primary PC Board Ass'y.....	2-14
■ ENH-120 □ Power Amplifier PC Board Ass'y.....	2-15
Packing Materials and Part Numbers.....	2-19
Accessories List.....	2-20


■ System Control Microprocessor Peripheral Circuit

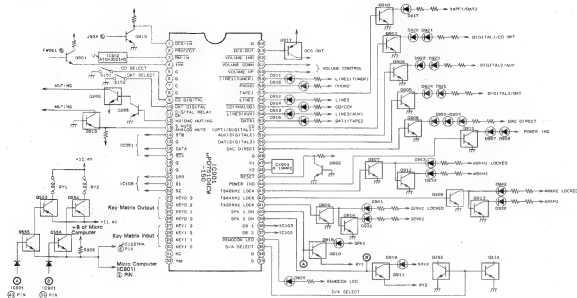


■ Signal Prediction Circuit




■ Bias Current Adjustment Circuit




■ System Control Microprocessor Peripheral Circuit

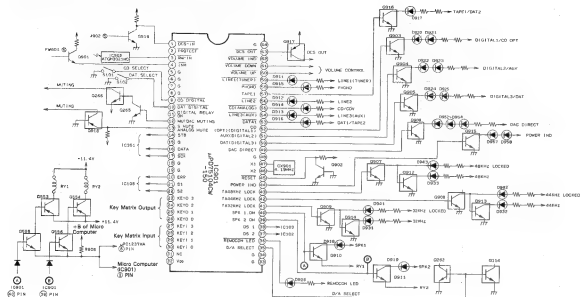

■ Signal Prediction Circuit



■ Bias Current Adjustment Circuit



/EATS

DIGITAL1/OD OPT


DIGITAL2/ANAL

DIGITAL3/DAT



40KHz LOCKED


60KHz



ircuit




Connection Diagram

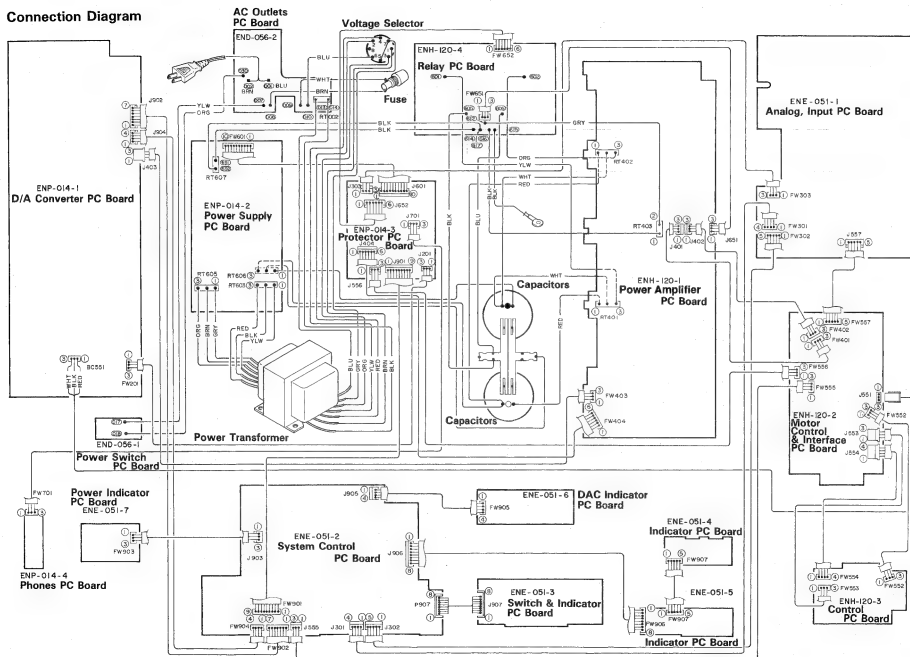


Printed Circuit Board A'ssay


■ Font & Analog Input PC Board (ENE-051)

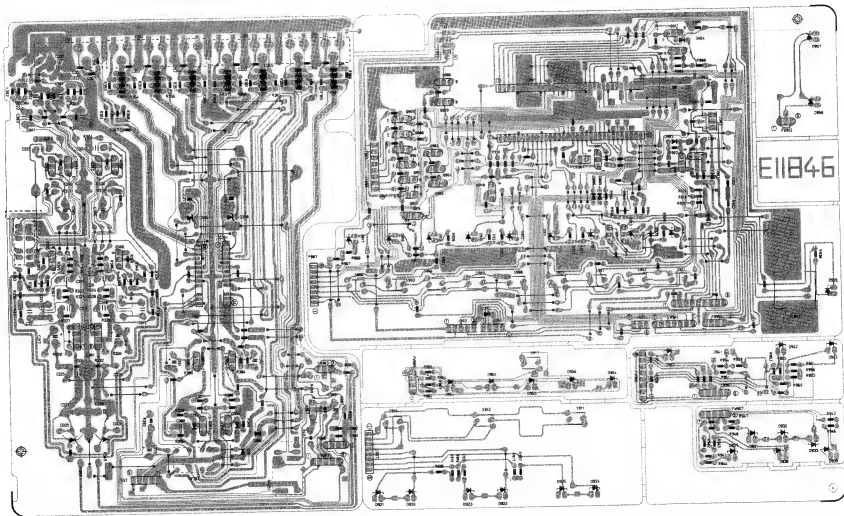


■ Power Switch & AC Outlets PC Board (END-056)

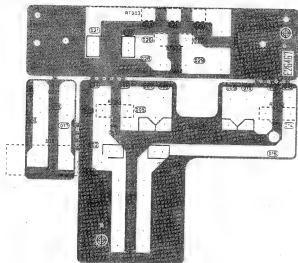


■ Power Amplifier PC Board (ENH-120)

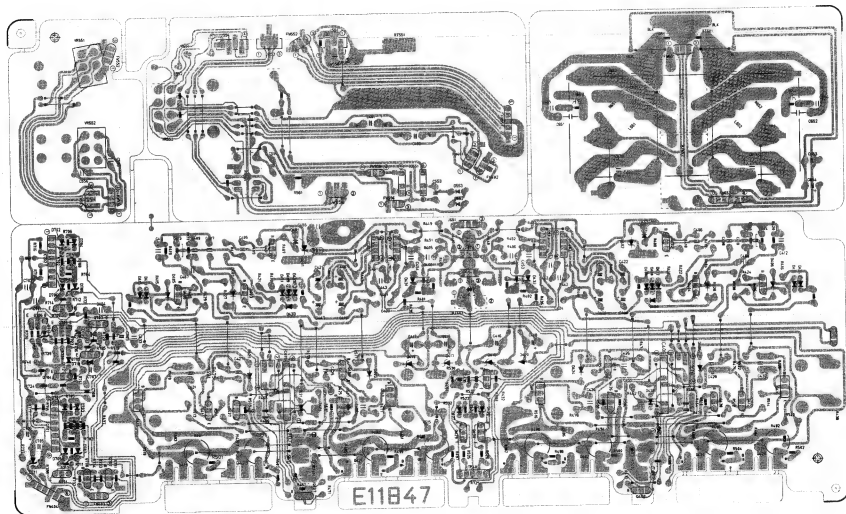

■ DAC & Power Supply PC Board (ENP-014)

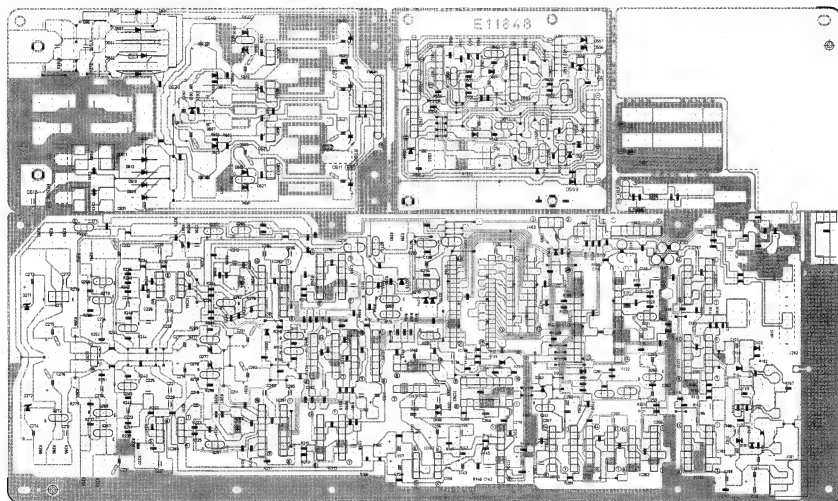

Exploded Views and Parts List

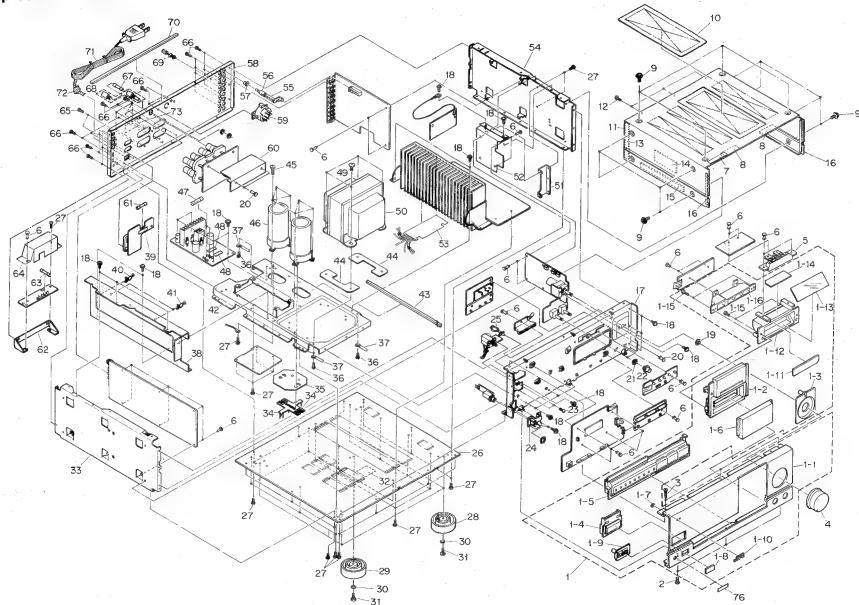

■ Parts List

△	Item	Part Number	Part Name	Q'ty	Description	Areas
	1	EPF-AXZ10101TNE	Front Panel Ass'y	1		
	1-1	E11838-002	Front Panel	1		
	1-2	E26167-002	Front Escutcheon Ass'y	1		
	1-3	E304949-004	Knob Ring	1		
	1-4	E305684-003	Push Button Ass'y	1		
	1-5	E305689-002	Push Button Ass'y	1		
	1-6	E305738-002	Window Screen	1		
	1-7	E30912-003	Speed Nut	1		
	1-8	E75006-001	Plate	1		
	1-9	E75007-001	Remote Control Escutcheon	1		
	1-10	PQ42376-1-3	JVC Mark	1		
	1-11	E75012-001	Plate	1		
	1-12	E26169-001	Back Cover	1		
	1-13	E75011-001	Plate	1		
	1-14	E75014-001	Plate	1		
	1-15	S9S73008C	Screw	4		
	1-16	E309657-001	LED Holder	1		
	2	SDS83008ACP	Screw	3		
	3	E66052-006	Special Screw	3		
	4	E305699-002	Volume Knob	1		
	5	E305698-002	LED Holder	1		
	6	E48729-008	Plastic Rivet	25	J,C,U	
	7	E48729-008	Plastic Rivet	28	Except J,C,U	
	8	E67000-005	Caution Label	1		
	9	EXO10040N60502	Caution Label	2		
	9	E51660-004	Special Screw	12		
	10	E306233-001	Protect Sheet	1		
	11	E26173-004	Metal Cover	1	E,EF,BS,U	
	12	E26173-005	Sheet	1	E,EF,BS,U	
	13	E306233-001	Protect Sheet	1	J,C,A,G	
	14	EXO150010R30510	Sheet	1		
	15	E75165-003	Front Bracket	1		
	16	E75184-002	Front Bracket	1		
	17	E75184-002	Front Bracket	1		
	18	G8S93008CC	Screw	27		
	19	E71862-003	Volume Nut	1		
	20	E48729-007	Plastic Rivet	2		
	21	E71862-001	Volume Nut	2		
	22	E75016-003	Knob	2		
	23	S9S73008CC	Screw	2		
	24	E75017-001	Headphone Bracket	1		
	25	E105946-001	Wire Clamp	1		
	26	E11538-004	Bottom Cover	1	J,C,U	
	27	S9S93008CC	Screw	28		
	28	S9S93008CC	Screw	29	Except J,C,U	
	29	E75018-005	Foot Assy	4	Corner Center	
	30	E75018-006	Foot Assy	5		
	31	WNS4000CC	Washer	5		
	32	E61661-005	Special Screw	5		
	33	E70781-001	Caution Label	1		
	34	E70715-002	Caution Label	1		
	35	E11537-003	Frame	1	Left	
	36	E73690-002	Earth Plate	2		
	37	E75065-003	Sheet	1		
	38	S9S73008M	Screw	4		
	39	E50870-005	Wire Clamp	0		
	40	E26172-003	Shield Cover	1		
	41	E61380-022	Fuse Label	1	J,C	
	42	QHW2052-001	Wire Clamp	1		

△ Safety Parts

△	Item	Part Number	Part Name	Q'ty	Description	Areas
	41	QHW2115-001	Wire Clamp	2		
	42	E11840-003	Trans Base	1		
	43	EXO270005N60502	Felt Spacer	1		
	44	E75097-003	Trans Sheet	2		
	45	SDS74010CC	Screw	6		
	46	E6Y6302-109	Electrolytic Capacitor	2	C002,C003	
	47	QMF5112-1R255	Fuse	2	F601,F602	J,C
	48	QMF5112-1R25J1	Fuse	2	F601,F602	A,E,EF,G,U
	49	QMF5112-1R2J1B5	Fuse	2	F601,F602	BS
	50	E61380-029	Caution Label	2		J,C
	51	E65389-006	Special Screw	4		
	52	ETP1300-05JA	Power Transformer	1		J,C
	53	ETP1300-05FA	Power Transformer	1		U
	54	ETP1300-05EA	Power Transformer	1		A,E,EF,G
	55	ETP1300-05EAB5	Power Transformer	1		BS
	56	E75020-001	Circuit Board Bracket	1		
	57	E306042-001	Shield Plate	1		
	58	E75166-001	Shield Plate Ass'y	1		
	59	E11537-004	Frame	1	Right	
	60	E65937-001	Push Shaft	1		
	61	E66226-001	Push Shaft	1		
	62	C40755-002	Push Knob	1		
	63	E26170-002	Rear Panel	1		J,C
	64	E26170-003	Rear Panel	1		U
	65	E26170-004	Rear Panel	1		Except J,C,U
	66	E303260-199	Rating Label	1		E,EF,G
	67	QSR0085-009	Voltage Selector	1		U
	68	E75478-001	Circuit Board Cover	1	Speaker	
	69	QMR6161-100	Fuse	1	F001	J,C
	70	E71074-002	Bracket	1		Except J,C,U
	71	QMF5112-5R011	Fuse	1	F002	A,E,EF,G
	72	QMF5112-5R011B5	Fuse	1	F002	BS
	73	E79222-004	Primary Cover	1		Except J,C,U
	74	E74304-002	Special Screw	23		J,C
	75	E73273-003	Special Screw	25		Except J,C
	76	QMF5112-5R011	Fuse	1	F003	U
	77	QMR03001-003	Fuse Holder	1		U
	78	E70078-001	GND Terminal	1		
	79	EXO300010N40502	Spacer	1		
	80	QMP1480-200H	Power Cord	1		J,C
	81	QMP7520-200	Power Cord	1		U
	82	QMP9800-200	Power Cord	1		E,EF
	83	QMP2560-244	Power Cord	1		A
	84	QMP39A0-200	Power Cord	1		G
	85	QMP9017-00BBS	Power Cord	1		BS
	86	QHS3771-10B	Cord Stopper	1		Except BS
	87	QHS3771-10BBS	Cord Stopper	1		BS
	88	E67199-001	Caution Label	1		J
	89	E65507-001	Caution Label	1		C
	90	E73684-002	Wire Cover	1		
	91	FWH690-36K12	Para Wire	2		
	92	E49267-001	Origin Marking Label	1		BS

△ Safety Parts

The Marks for Designated Areas

J.....the U.S.A.

C.....Canada

A.....Australia

E,EF.....Continental Europe

G.....West Germany

BS.....the U.K.


U.....Other Countries

No mark indicates all areas.

Printed Circuit Board Ass'y and Parts List

■ ENP-014 □ Digital & Power PC Board Ass'y

Note: ENP-014 □ varies according to the areas employed. See note (1) when placing an order.

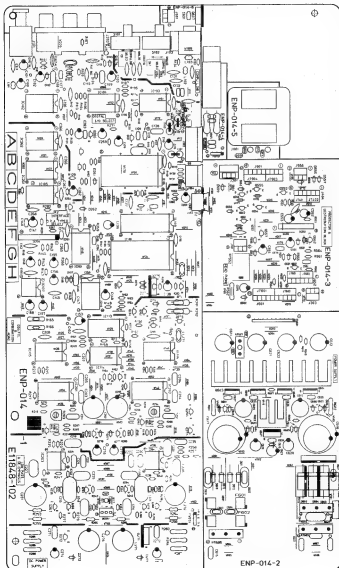

Note (1)

PC Board Ass'y	Designated Areas
ENP-014 [B]	the U.S.A., Canada
ENP-014 [C]	Other Countries
ENP-014 [D]	Australia, Continental Europe, the U.K.
ENP-014 [E]	West Germany

Transistors

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
Q101	DTC144ES	SILICON ROHM	B O A R D A S S Y
Q111	2SA3029(C-B)	SILICON HITACHI	
Q112	2SC335(C)	SILICON HITACHI	
Q113	2SA944A(R-S)	SILICON MATSUSHITA	
Q114	DTC114YS	SILICON ROHM	
Q201	2SK170(V)	F.E.T. TOSHIBA	
Q202	2SK170(V)	F.E.T. TOSHIBA	
Q203	2SC3068	SILICON SANYO	
Q204	2SC3068	SILICON SANYO	
Q205	DTA114YS	SILICON ROHM	
Q241	2SC458(C-B)	SILICON HITACHI	
Q262	DTC114YS	SILICON ROHM	
Q264	DTC114YS	SILICON ROHM	
Q265	2SC1685(R-S)	SILICON MATSUSHITA	
Q266	DTA114ES	SILICON ROHM	
Q267	2SC3068	SILICON SANYO	
Q268	2SC3068	SILICON SANYO	
Q269	2SC3068	SILICON SANYO	
Q270	2SC3068	SILICON SANYO	
Q271	2SB9127A(R-S)	SILICON SANYO	
Q272	2SC2060(G-R)	SILICON ROHM	
Q273	2SA934(G-R)	SILICON ROHM	
Q275	2SA1015(Y-GR)	SILICON TOSHIBA	
Q275	2SB1271(R-B)	SILICON SANYO	
Q275	2SB1271(R-B)	SILICON SANYO	
Q275	2SB1271(R-B)	SILICON SANYO	
Q277	2SC2060(G-R)	SILICON ROHM	
Q278	2SA1015(Y-GR)	SILICON TOSHIBA	
Q351	DTA114YS	SILICON ROHM	
Q352	DTC114YS	SILICON ROHM	
Q353	DTA114YS	SILICON ROHM	
Q354	DTA114YS	SILICON ROHM	
Q355	DTC114YS	SILICON ROHM	
Q356	DTC114YS	SILICON ROHM	
Q357	DTC114YS	SILICON ROHM	
Q601	2SK244(V)	F.E.T. TOSHIBA	
Q602	2SK244(V)	F.E.T. TOSHIBA	
Q603	2SD2085(F-G)	SILICON ROHM	
Q604	2SB1127(F-G)	SILICON ROHM	
Q605	2SD2081(F-G)	SILICON ROHM	
Q606	2SB1187(F-G)	SILICON ROHM	
Q607	2SD1944(J-K)	SILICON ROHM	

I.C.s

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
IC101	TC74HC00AP	L.C. TOSHIBA	B O A R D A S S Y
IC102	TC74HC00AP	L.C. TOSHIBA	
IC103	TC74HC00AP	L.C. TOSHIBA	
IC104	TC5081AP	L.C. TOSHIBA	
IC105	TC74HC8AP	L.C. TOSHIBA	
IC106	YM3523B	L.C. YAMANO	
IC107	MJMA5600D	L.C. DAIICHI	
IC108	VC4111	L.C. MATSUSHITA	
IC109	LC3517BSL-15	L.C. SANYO	
IC110	SN74LS262A	L.C. TATSUMOTO	
IC111	TK3614	L.C. YAMANO	
IC114	TC74HC74P	L.C. TOSHIBA	
IC115	TC74HC74P	L.C. TOSHIBA	
IC116	TC74HC74P	L.C. TOSHIBA	
IC201	PCMS6P	L.C. NIKONBARBU	
IC202	PCMS6P	L.C. NIKONBARBU	
IC203	NJM5532D	L.C. DAIICHI	
IC204	NJM5532D	L.C. DAIICHI	
IC261	TC74HC74P	L.C. TOSHIBA	
IC262	TC74HC74P	L.C. TOSHIBA	
IC263	TC74HC123P	L.C. TOSHIBA	
IC253	UPC237MA	L.C. NEC	

Diodes

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
D101	1SS133	SILICON ROHM	B O A R D A S S Y
D102	1SS133	SILICON ROHM	
D104	1SS133	SILICON ROHM	
D106	1SS133	SILICON ROHM	
D107	1SS133	SILICON ROHM	
D108	1SS133	SILICON ROHM	
D205	MA700	ZENER MATSUSHITA	
D261	1SS133	SILICON ROHM	
D262	1SS133	SILICON ROHM	
D263	1SS133	SILICON ROHM	
D271	BDP-1J5B3	ZENER NEC	
D272	BDP-1J5B3	ZENER NEC	
D273	MT23.3JB	ZENER ROHM	
D275	MT24.7JB	ZENER ROHM	
D277	BD5-6J5B3	ZENER NEC	
D278	BD5-6J5B3	ZENER NEC	
D551	1SS133	SILICON ROHM	
D552	1SS133	SILICON ROHM	
D553	1SS133	SILICON ROHM	
D554	1SS133	SILICON ROHM	
D555	1SS133	SILICON ROHM	
D556	MT220JC	ZENER ROHM	
D557	MT220JC	ZENER ROHM	
D558	MT27.5JC	ZENER ROHM	
D559	MT213JC	ZENER ROHM	
D560	MT213JC	ZENER ROHM	
D602	300P25FC	SILICON NIKONINTER	
D603	300P25FC	SILICON NIKONINTER	
D604	300P25FC	SILICON NIKONINTER	
D605	RD18J5B3	ZENER ROHM	
D606	RD18J5B3	ZENER ROHM	
D609	20E2FA-S	SI-DIODE NIKONINTER	
D610	20E2FA-S	SI-DIODE NIKONINTER	
D611	20E2FA-S	SI-DIODE NIKONINTER	
D612	20E2FA-S	SI-DIODE NIKONINTER	
D613	RD12J5B3	ZENER ROHM	
D614	RD12J5B3	ZENER ROHM	
D615	MT26.8JC	ZENER ROHM	
D616	MT26.8JC	ZENER ROHM	

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
C100	0ETB10M-104	10MF 50V ELECTRO	B O A R D A S S Y
C101	0ETB10M-107	100MF 25V ELECTRO	
C102	0ETB10M-474	47MF 25V ELECTRO	
C103	0ETB10M-474	47MF 25V ELECTRO	
C104	0C020205-155	1.5MF 25V CERAMIC	
C105	0C0210H-473	0.47MF 25V CERAMIC	
C106	0C0210H-473	0.47MF 25V CERAMIC	
C107	0C0210H-473	0.47MF 25V CERAMIC	
C108	0FV81HJ-103	0.01MF 50V T.FILM	
C109	0FV81HJ-103	0.01MF 50V T.FILM	
C110	0C020205-155	1.5MF 25V CERAMIC	
C111	0C0210H-473	0.47MF 25V CERAMIC	
C112	0C020205-155	1.5MF 25V CERAMIC	
C113	0C020205-155	1.5MF 25V CERAMIC	
C115	0ETB10M-107	100MF 25V ELECTRO	
C116	0C0210H-473	0.47MF 25V CERAMIC	
C118	0C0210H-473	0.47MF 25V CERAMIC	
C119	0CT300J-220	22PF 50V CERAMIC	
C120	0CT300J-220	22PF 50V CERAMIC	
C121	0C0210H-221	220PF 50V CERAMIC	
C122	0C0210H-221	220PF 50V CERAMIC	
C124	0C0810H-221	22PF 50V CERAMIC	
C127	0CT300J-220	22PF 50V CERAMIC	
C128	0FV81HJ-822	8200PF 50V MYLAR	
C129	0ETB10M-225	2.2MF 50V ELECTRO	
C133	0C0210H-221	220PF 50V CERAMIC	
C134	0C0210H-473	0.47MF 25V CERAMIC	
C136	0C0210H-473	0.47MF 25V CERAMIC	
C138	0ETB10M-107	100MF 25V ELECTRO	
C139	0ETB10M-226	22MF 16V ELECTRO	
C140	0C0810H-221	22PF 50V CERAMIC	
C141	0C0210H-107	100MF 10V ELECTRO	
C142	0C0210H-223	0.022MF 25V CERAMIC	
C143	0ETB10M-107	100MF 25V ELECTRO	
C145	0C0210H-331	330PF 50V CERAMIC	
C146	0FV81HJ-392	3900PF 50V MYLAR	
C147	0C0210H-270	27PF 50V CERAMIC	
C148	0ETB10M-107	100MF 25V ELECTRO	
C152	0C0210H-473	0.47MF 25V CERAMIC	
C153	0ETB10M-107	100MF 25V ELECTRO	

Capacitors

[illegible]

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
C625	QCGB1HK-102	1000PF 50V	CERAMIC
C626	QCGB1HK-102	1000PF 50V	CERAMIC
C627	QCGB1HK-102	1000PF 50V	CERAMIC
C628	QCGB1HK-102	1000PF 50V	CERAMIC
C631	EF2009A-223	0.222MF	M.MYLAR
C632	EF2009A-223	0.222MF	M.MYLAR

A : SAFETY PARTS

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R101	QR167-750	75 2.6W	CARBON
R102	QR167-750	75 2.6W	CARBON
R103	QR167-100	10 1.2W	CARBON
R104	QR167-103	10K 1.6W	CARBON
R105	QR167-103	10K 1.6W	CARBON
R106	QR167-222	2.2K 1.6W	CARBON
R107	QR167-222	2.2K 1.6W	CARBON
R108	QR167-103	10K 1.6W	CARBON
R109	QR167-820	82 2.6W	CARBON
R110	QR167-103	10K 1.6W	CARBON
R111	QR167-201	270 1.6W	CARBON
R112	QR167-471	470 1.6W	CARBON
R113	QR167-183	18K 1.6W	CARBON
R114	QR167-183	18K 1.6W	CARBON
R115	QR167-103	10K 1.6W	CARBON
R116	QR167-103	10K 1.6W	CARBON
R117	QR167-103	10K 1.6W	CARBON
R118	QR167-103	10K 1.6W	CARBON
R119	QR167-101	100 1.6W	CARBON
R120	QR167-103	10K 1.6W	CARBON
R121	QR167-471	470 1.6W	CARBON
R122	QR167-101	100 1.6W	CARBON
R123	QR167-101	100 1.6W	CARBON
R124	QR167-101	100 1.6W	CARBON
R125	QR167-101	100 1.6W	CARBON
R126	QR167-101	100 1.6W	CARBON
R127	QR167-471	470 1.6W	CARBON
R128	QR167-101	100 1.6W	CARBON
R129	QR167-101	100 1.6W	CARBON
R130	QR167-101	100 1.6W	CARBON
R131	QR167-471	470 1.6W	CARBON
R132	QR167-472	4.7K 1.6W	CARBON
R133	QR167-102	2K 1.6W	CARBON
R134	QR167-221	22 1.6W	CARBON
R135	QR167-103	10K 1.6W	CARBON
R141	QR167-103	10K 1.6W	CARBON
R142	QR167-101	100 1.6W	CARBON
R143	QR167-392	3.9K 1.6W	CARBON
R145	QR167-103	10K 1.6W	CARBON
R146	QR167-103	10K 1.6W	CARBON
R147	QR167-152	15K 1.6W	CARBON
R148	QR167-222	2.2K 1.6W	CARBON
R149	QR167-103	10K 1.6W	CARBON
R151	QR167-472	4.7K 1.6W	CARBON
R152	QR167-101	100 1.6W	CARBON
R154	QR167-102	2K 1.6W	CARBON
R155	QR167-103	10K 1.6W	CARBON
R156	QR167-152	15K 1.6W	CARBON
R158	QR167-101	100 1.6W	CARBON
R159	QR167-101	100 1.6W	CARBON
R160	QR167-101	100 1.6W	CARBON
R161	QR167-101	100 1.6W	CARBON
R162	QR167-101	100 1.6W	CARBON
R163	QR167-221	22 1.6W	CARBON
R164	QR167-221	22 1.6W	CARBON
R165	QR167-471	470 1.6W	CARBON
R166	QR167-471	470 1.6W	CARBON
R167	QR167-101	100 1.6W	CARBON
R201	QR167-103	10K 1.6W	CARBON
R202	QR167-224	22K 1.6W	CARBON
R203	QV3518-104	100K 0.1W	VARIABLE
R204	QV3518-104	100K 0.1W	VARIABLE
R205	QR167-105	10K 1.6W	CARBON
R206	QR167-105	10K 1.6W	CARBON
R207	QR167-474	4.7K 1.6W	CARBON
R208	QR167-474	4.7K 1.6W	CARBON
R209	QR167-472	4.7K 1.6W	CARBON
R210	QR167-101	100 1.6W	CARBON
R213	QR167-114	11K 1.6W	CARBON
R214	QR167-114	11K 1.6W	CARBON
R215	QR167-224	22K 1.6W	CARBON
R216	QR167-224	22K 1.6W	CARBON
R217	QR167-330	33K 1.6W	CARBON
R218	QR167-330	33K 1.6W	CARBON
R219	QR167-104	100K 1.6W	CARBON
R220	QR167-104	100K 1.6W	CARBON

A : SAFETY PARTS

Note (1)

PC Board Ass'y	Designated Areas
ENE-051 [B]	the U.S.A., Canada
ENE-051 [C]	Australia, Continental Europe, the U.K., Other Countries
ENE-051 [D]	West Germany

Transistors

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
Q301	2SK170(GR,BL)	F.E.T. MATSUSHITA	
Q302	2SK170(GR,BL)	F.E.T. MATSUSHITA	
Q303	2SK170(GR,BL)	F.E.T. MATSUSHITA	
Q304	2SK170(GR,BL)	F.E.T. MATSUSHITA	
Q305	2SC2240(GR,BL)	SILICON TOSHIBA	
Q306	2SC2240(GR,BL)	SILICON TOSHIBA	
Q353	2SK246(GR,BL)	F.E.T. MATSUSHITA	
Q354	2SK246(GR,BL)	F.E.T. MATSUSHITA	
Q355	2SK163(L1)	F.E.T. NEC	
Q356	2SK163(L1)	F.E.T. NEC	
Q357	2TA114YS	SILICON ROHM	
Q401	DTC114YS	SILICON ROHM	
Q402	DTC114YS	SILICON ROHM	
Q403	DTC114YS	SILICON ROHM	
Q404	DTC114YS	SILICON ROHM	
Q405	DTC114YS	SILICON ROHM	
Q406	DTC114YS	SILICON ROHM	
Q407	DTC114YS	SILICON ROHM	
Q408	DTC114YS	SILICON ROHM	
Q409	DTC114YS	SILICON ROHM	
Q410	DTC114YS	SILICON ROHM	
Q411	DTC114YS	SILICON ROHM	
Q412	DTC114YS	SILICON ROHM	
Q413	DTC114YS	SILICON ROHM	
Q414	DTC114YS	SILICON ROHM	
Q415	DTC114YS	SILICON ROHM	
Q416	DTC114YS	SILICON ROHM	
Q417	DTA114YS	SILICON ROHM	
Q418	DTA114YS	SILICON ROHM	
Q419	2SC16B5(R,S)	SILICON MATSUSHITA	
Q420	DTC114YS	SILICON ROHM	

Δ: SAFETY PARTS

I.C.s

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
IC301	NJM456000	I.C. DAINICHI	
IC351	TC9164N	I.C. TOSHIBA	
IC901	UPD75104CM-150	I.C. NEC	
IC902	A19H3021M0	I.C. MATSUSHITA	

Δ: SAFETY PARTS

Diodes

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
D325	RD16/583	ZENER NEC	
D326	RD16/583	ZENER NEC	
D381	15S133	SILICON ROHM	
D382	15S133	SILICON ROHM	
D391	15S133	SILICON ROHM	
D392	15S133	SILICON ROHM	
D394	15S133	SILICON ROHM	
D395	RD16/583	ZENER NEC	
D396	RD16/583	ZENER NEC	
D901	15S133	SILICON ROHM	
D902	15S133	SILICON ROHM	
D903	15S133	SILICON ROHM	
D904	15S133	SILICON ROHM	
D905	15S133	SILICON ROHM	
D906	15S133	SILICON ROHM	
D911	SLR-34DC3F	L.E.D. ROHM	
D912	SLR-34DC3F	L.E.D. ROHM	
D913	SLR-34DC3F	L.E.D. ROHM	
D914	SLR-34DC3F	L.E.D. ROHM	
D915	SLR-34DC3F	L.E.D. ROHM	

Diodes

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
D916	SLR-34DC3F	L.E.D. ROHM	
D917	SLR-34DC3F	L.E.D. ROHM	
D918	SLR-34DC3F	L.E.D. ROHM	
D919	SLR-34DC3F	L.E.D. ROHM	
D920	SLV-31FC3F	L.E.D. ROHM	
D921	SLV-31FC3F	L.E.D. ROHM	
D922	SLV-31FC3F	L.E.D. ROHM	
D923	SLV-31FC3F	L.E.D. ROHM	
D924	SLV-31FC3F	L.E.D. ROHM	
D925	SLV-31FC3F	L.E.D. ROHM	
D926	SLR-34DC3F	L.E.D. ROHM	
D927	SLV-31FC3F	L.E.D. ROHM	
D928	SLV-31FC3F	L.E.D. ROHM	
D929	SLV-31FC3F	L.E.D. ROHM	
D930	SLV-31FC3F	L.E.D. ROHM	
D931	SLV-31FC3F	L.E.D. ROHM	
D932	SLV-31FC3F	L.E.D. ROHM	
D933	SLV-31FC3F	L.E.D. ROHM	
D934	SLV-31FC3F	L.E.D. ROHM	
D935	SLV-31FC3F	L.E.D. ROHM	
D936	SLV-31FC3F	L.E.D. ROHM	
D937	SLV-31FC3F	L.E.D. ROHM	
D938	SLV-31FC3F	L.E.D. ROHM	
D939	SLV-31FC3F	L.E.D. ROHM	
D940	SLV-31FC3F	L.E.D. ROHM	
D941	SLV-31FC3F	L.E.D. ROHM	
D942	SLV-31FC3F	L.E.D. ROHM	
D943	SLV-31FC3F	L.E.D. ROHM	
D944	SLV-31FC3F	L.E.D. ROHM	
D945	SLV-31FC3F	L.E.D. ROHM	
D946	SLV-31FC3F	L.E.D. ROHM	
D947	SLV-31FC3F	L.E.D. ROHM	
D948	SLV-31FC3F	L.E.D. ROHM	
D949	SLV-31FC3F	L.E.D. ROHM	
D950	SLV-31FC3F	L.E.D. ROHM	

Δ: SAFETY PARTS

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
C301	EF20101-2215	220PF M.MYLAR	D
C302	EF20101-1015	100PF M.MYLAR	D
C303	EF20101-1015	100PF M.MYLAR	D
C304	EF20101-2215	220PF M.MYLAR	D
C305	EF20101-1025	1000PF M.MYLAR	B
C306	EF20101-1025	1000PF M.MYLAR	C
C307	EF20101-1025	1000PF M.MYLAR	D
C308	EF20101-1025	1000PF M.MYLAR	D
C309	EF20101-1025	1000PF M.MYLAR	D
C310	EF20101-1025	1000PF M.MYLAR	D
C311	EF20101-1025	1000PF M.MYLAR	D
C312	EF20101-1025	1000PF M.MYLAR	D
C313	EF20101-1025	1000PF M.MYLAR	D
C314	EF20101-1025	1000PF M.MYLAR	D
C315	EF20101-1025	1000PF M.MYLAR	D
C316	EF20101-1025	1000PF M.MYLAR	D
C317	EE25006-226	22MF ELECTRO	D
C318	EE25006-226	22MF ELECTRO	D
C319	EF20101-5628	5600PF M.MYLAR	D
C320	EF20101-5628	5600PF M.MYLAR	D
C321	EF20101-3315	330PF M.MYLAR	D
C322	EF20101-3315	330PF M.MYLAR	D
C323	EF20101-8805	88PF M.MYLAR	D
C324	EF20101-8805	88PF M.MYLAR	D
C325	EF20101-2220	220PF M.MYLAR	D
C326	EF20101-2220	220PF M.MYLAR	D
C327	EE2505-227	220MF ELECTRO	D
C328	EE2505-227	220MF ELECTRO	D
C329	EF20101-1025	1000PF M.MYLAR	D
C330	EF20101-1025	1000PF M.MYLAR	D
C331	EF20101-1025	1000PF M.MYLAR	D
C332	EF20101-1025	1000PF M.MYLAR	D
C333	EF20101-1025	1000PF M.MYLAR	D
C334	EF20101-1025	1000PF M.MYLAR	D
C335	EF20101-1025	1000PF M.MYLAR	D
C336	EF20101-1025	1000PF M.MYLAR	D
C337	EF20101-1025	1000PF M.MYLAR	D
C338	EF20101-1025	1000PF M.MYLAR	D
C339	EF20101-1025	1000PF M.MYLAR	D
C340	EF20101-1025	1000PF M.MYLAR	D
C341	EF20101-1025	1000PF M.MYLAR	D
C342	EF20101-1025	1000PF M.MYLAR	D
C343	EF20101-1025	1000PF M.MYLAR	D
C344	EF20101-1025	1000PF M.MYLAR	D
C345	EF20101-1025	1000PF M.MYLAR	D
C346	EF20101-1025	1000PF M.MYLAR	D
C347	EF20101-1025	1000PF M.MYLAR	D
C348	EF20101-1025	1000PF M.MYLAR	D
C349	EF20101-1025	1000PF M.MYLAR	D
C350	EF20101-1025	1000PF M.MYLAR	D
C351	EF20101-1025	1000PF M.MYLAR	D
C352	EF20101-1025	1000PF M.MYLAR	D
C353	EF20101-1025	1000PF M.MYLAR	D
C354	EF20101-1025	1000PF M.MYLAR	D
C355	EF20101-1025	1000PF M.MYLAR	D
C356	EF20101-1025	1000PF M.MYLAR	D
C357	EF20101-1025	1000PF M.MYLAR	D
C358	EF20101-1025	1000PF M.MYLAR	D
C359	EF20101-1025	1000PF M.MYLAR	D
C360	EF20101-1025	1000PF M.MYLAR	D
C361	EF20101-1025	1000PF M.MYLAR	D
C362	EF20101-1025	1000PF M.MYLAR	D
C363	EF20101-1025	1000PF M.MYLAR	D
C364	EF20101-1025	1000PF M.MYLAR	D
C365	EF20101-1025	1000PF M.MYLAR	D
C366	EF20101-1025	1000PF M.MYLAR	D
C367	EF20101-1025	1000PF M.MYLAR	D
C368	EF20101-1025	1000PF M.MYLAR	D
C369	EF20101-1025	1000PF M.MYLAR	D
C370	EF20101-1025	1000PF M.MYLAR	D
C371	EF20101-1025	1000PF M.MYLAR	D

Δ: SAFETY PARTS

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
C372	0C081HK-221	220PF 50V CERAMIC	D
C373	EEZ5006-226	22MF 50V ELECTRO	
C374	EEZ5006-226	22MF 50V ELECTRO	
C375	0E781HK-105	10NF 50V ELECTRO	
C380	0E781HK-225	2.2NF 50V KVM POLY	
C381	0C081HK-561	560PF 50V CERAMIC	
C382	0C081HK-561	560PF 50V CERAMIC	
C387	0E781HK-105	10NF 50V ELECTRO	
C391	0E781HK-475	4.7NF 50V ELECTRO	
C392	0E781HK-475	4.7NF 50V ELECTRO	
C393	0E781HK-475	4.7NF 50V ELECTRO	
C402	0E780JM-108	1000PF 6.3V ELECTRO	
C403	0CF21HP-223	0.022NF 50V CERAMIC	
C404	0E781HK-107	100NF 10V ELECTRO	
C405	0CH11E1-223	0.022NF 25V CERAMIC	

Δ : SAFETY PARTS

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R301	QR0167J-473	47K 1/6W CARBON	
R302	QR0167J-473	47K 1/6W CARBON	
R303	QR0141J-SR65	5.6 1/4W CARBON	
R304	QR0141J-SR65	5.6 1/4W CARBON	
R305	QR0167J-222	2.2K 1/6W CARBON	
R306	QR0167J-222	2.2K 1/6W CARBON	
R307	QR0167J-222	2.2K 1/6W CARBON	
R308	QR0167J-222	2.2K 1/6W CARBON	
R311	QR0167J-470	47 1/6W CARBON	
R312	QR0167J-470	47 1/6W CARBON	
R313	QR0167J-471	470 1/6W CARBON	
R314	QR0167J-471	470 1/6W CARBON	
R315	QR0167J-821	820 1/6W CARBON	
R316	QR0167J-821	820 1/6W CARBON	
R317	QR0141J-2205	22 1/4W CARBON	
R318	QR0141J-2205	22 1/4W CARBON	
R319	QR0141J-2715	270 1/4W CARBON	
R320	QR0141J-2715	270 1/4W CARBON	
R321	QR0167J-102	1K 1/6W CARBON	D
R322	QR0167J-102	1K 1/6W CARBON	D
R323	QRV144F-1002	10K 1/4W F.FILM	
R324	QRV144F-1002	10K 1/4W F.FILM	
R325	QRV144F-1803	180K 1/4W F.FILM	
R326	QRV144F-1803	180K 1/4W F.FILM	
R327	QRV144F-1802	16K 1/4W F.FILM	
R328	QRV144F-1802	16K 1/4W F.FILM	
R329	QR0141J-1018	100 1/4W CARBON	
R330	QR0141J-1018	100 1/4W CARBON	
R331	QR0167J-104	100K 1/6W CARBON	
R332	QR0167J-104	100K 1/6W CARBON	
R333	QR0167J-475	4.7M 1/6W CARBON	
R334	QR0167J-475	4.7M 1/6W CARBON	
R335	QR0167J-475	4.7M 1/6W CARBON	
R336	QR0167J-475	4.7M 1/6W CARBON	
R337	QR0167J-275	2.7M 1/6W CARBON	
R338	QR0167J-275	2.7M 1/6W CARBON	
R339	QR0167J-475	4.7M 1/6W CARBON	
R340	QR0167J-475	4.7M 1/6W CARBON	
R341	QR0167J-471	470 1/6W CARBON	
R342	QR0167J-471	470 1/6W CARBON	
R343	QR0167J-332	3.3K 1/6W CARBON	
R344	QR0167J-332	3.3K 1/6W CARBON	
R347	QR0167J-153	15K 1/6W CARBON	
R348	QR0167J-153	15K 1/6W CARBON	
R349	QR0140J-102	10K 1/4W UNF. CARBON B	
R349	QR010077-470	47 1/4W FUSIBLE C	
R349	QR010077-470	47 1/4W FUSIBLE D	
R350	QR0140J-4705	47 1/4W UNF. CARBON B	
R350	QR010077-470	47 1/4W FUSIBLE C	
R350	QR010077-470	47 1/4W FUSIBLE D	
R351	QR0167J-331	330 1/6W CARBON	
R352	QR0167J-331	330 1/6W CARBON	
R353	QR0167J-331	330 1/6W CARBON	
R354	QR0167J-331	330 1/6W CARBON	
R355	QR0167J-331	330 1/6W CARBON	
R356	QR0167J-331	330 1/6W CARBON	
R357	QR0167J-331	330 1/6W CARBON	
R358	QR0167J-331	330 1/6W CARBON	
R359	QR0167J-331	330 1/6W CARBON	
R360	QR0167J-331	330 1/6W CARBON	
R361	QR0167J-331	330 1/6W CARBON	
R362	QR0167J-331	330 1/6W CARBON	
R363	QR0167J-331	330 1/6W CARBON	
R364	QR0167J-331	330 1/6W CARBON	
R365	QR0167J-331	330 1/6W CARBON	
R366	QR0167J-331	330 1/6W CARBON	
R367	QR0167J-676	670K 1/6W CARBON	

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R368	QR0167J-474	470K 1/6W CARBON	
R369	QR0167J-474	470K 1/6W CARBON	
R370	QR0167J-474	470K 1/6W CARBON	
R371	QR0167J-474	470K 1/6W CARBON	
R372	QR0167J-474	470K 1/6W CARBON	
R373	QR0167J-474	470K 1/6W CARBON	
R374	QR0167J-474	470K 1/6W CARBON	
R375	QR0167J-105	1M 1/6W CARBON	
R376	QR0167J-105	1M 1/6W CARBON	
R377	QR0167J-474	470K 1/6W CARBON	
R378	QR0167J-474	470K 1/6W CARBON	
R379	QR0167J-105	1M 1/6W CARBON	
R380	QR0167J-105	1M 1/6W CARBON	
R381	QR0167J-474	470K 1/6W CARBON	
R382	QR0167J-474	470K 1/6W CARBON	
R383	QR0167J-822	8.2K 1/6W CARBON	
R384	QR0167J-822	8.2K 1/6W CARBON	
R387	QR0167J-221	220 1/6W CARBON	
R388	QR0167J-221	220 1/6W CARBON	
R391	QR0167J-563	56K 1/6W CARBON	
R392	QR0140J-8205	82 1/4W UNF. CARBON C	
R392	QR0140J-8205	82 1/4W UNF. CARBON D	
R394	QR0167J-824	820K 1/6W CARBON	
R399	QR0140J-1025	1.5K 1/4W UNF. CARBON	
R400	QR0140J-1825	1.8K 1/4W UNF. CARBON	
R401	QR0167J-103	10K 1/6W CARBON	
R402	QR0167J-103	10K 1/6W CARBON	
R403	QR0167J-473	47K 1/6W CARBON	
R404	QR0167J-103	10K 1/6W CARBON	
R405	QR0167J-101	100 1/6W CARBON	
R406	QR0167J-391	390 1/6W CARBON	
R407	QR0167J-103	10K 1/6W CARBON	
R408	QR0167J-473	47K 1/6W CARBON	
R409	QR0167J-333	33K 1/6W CARBON	
R410	QR0167J-104	100K 1/6W CARBON	
R413	QR0167J-223	22K 1/6W CARBON	
R414	QR0167J-223	22K 1/6W CARBON	
R415	QR0167J-301	300 1/6W CARBON	
R416	QR0167J-301	300 1/6W CARBON	
R417	QR0167J-301	300 1/6W CARBON	
R418	QR0167J-103	10K 1/6W CARBON	
R419	QR0167J-103	10K 1/6W CARBON	
R420	QR0167J-103	10K 1/6W CARBON	
R421	QR0167J-103	10K 1/6W CARBON	
R422	QR0167J-271	270 1/6W CARBON	
R423	QR0167J-271	270 1/6W CARBON	
R424	QR0167J-271	270 1/6W CARBON	
R425	QR0167J-271	270 1/6W CARBON	
R426	QR0167J-271	270 1/6W CARBON	
R427	QR0167J-271	270 1/6W CARBON	
R428	QR0167J-271	270 1/6W CARBON	
R429	QR0167J-271	270 1/6W CARBON	
R430	QR0167J-472	4.7K 1/6W CARBON	
R431	QR0167J-151	150 1/6W CARBON	
R432	QR0167J-221	220 1/6W CARBON	
R433	QR0167J-201	200 1/6W CARBON	
R436	QR0167J-201	200 1/6W CARBON	
R437	QR0167J-201	200 1/6W CARBON	
R438	QR0167J-241	240 1/6W CARBON	
R439	QR0167J-241	240 1/6W CARBON	
R440	QR0167J-241	240 1/6W CARBON	
R441	QR0167J-241	240 1/6W CARBON	
R442	QR0167J-241	240 1/6W CARBON	
R443	QR0167J-241	240 1/6W CARBON	
R444	QR0167J-271	270 1/6W CARBON	
R445	QR0167J-271	270 1/6W CARBON	
R446	QR0167J-271	270 1/6W CARBON	
R447	QR0167J-151	150 1/6W CARBON	
R448	QR0167J-181	180 1/6W CARBON	
R451	QR0167J-201	200 1/6W CARBON	
R452	QR0167J-201	200 1/6W CARBON	
R453	QR0167J-201	200 1/6W CARBON	
R454	QR0167J-271	270 1/6W CARBON	
R455	QR0167J-271	270 1/6W CARBON	
R456	QR0167J-271	270 1/6W CARBON	
R457	QR0167J-201	200 1/6W CARBON	
R458	QR0167J-271	270 1/6W CARBON	
R459	QR0167J-102	1K 1/6W CARBON	
R460	QR0167J-102	1K 1/6W CARBON	
R461	QR0167J-102	1K 1/6W CARBON	
R462	QR0167J-151	150 1/6W CARBON	
R463	QR0167J-151	150 1/6W CARBON	
R464	QR0167J-201	200 1/6W CARBON	
R465	QR0167J-221	220 1/6W CARBON	
R467	QR0167J-471	470 1/6W CARBON	
R468	QR0167J-471	470 1/6W CARBON	
R471	QR0167J-472	4.7K 1/6W CARBON	

Δ : SAFETY PARTS

Others

ITEM	PART NUMBER	DESCRIPTION	AREA
	E11246-102	CIRCUIT BOARD	
	E305688-001	HOLDER	
	E305693-001	HOLDER	
	E48729-008	PLASTIC RIVET	
J301	EMV7122-004	CONNECTOR	
J302	EMV7122-005	CONNECTOR	
J351	EMN00TV-408A	AP PIN JACK	
J352	EMN00TV-405A	AP PIN JACK	
J353	EMN00TV-408A	AP PIN JACK	
J354	EMN00TV-408A	AP PIN JACK	
J555	EMV7122-003	CONNECTOR	
J557	EMV7122-005	CONNECTOR	
J905	EMV7122-003	CONNECTOR	
J905	EMV7122-004	CONNECTOR	
J906	EMV7122-004	CONNECTOR	
J907	EMV5120-008	PLUS ASSY	
L301	E9L4004-820	INDUCTOR	D
L302	E9L4004-820	INDUCTOR	D
L303	E9L4004-820	INDUCTOR	D
L304	E9L4004-820	INDUCTOR	D
P907	EMV7120-008	CONNECTOR	
S301	OST9101-E04	PUSH SWITCH	
S901	ESP0001-018	TACT SWITCH	
S902	ESP0001-018	TACT SWITCH	
S903	ESP0001-018	TACT SWITCH	
S904	ESP0001-018	TACT SWITCH	
S905	ESP0001-018	TACT SWITCH	


Others

ITEM	PART NUMBER	DESCRIPTION	AREA
S906	ESP0001-018	TACT SWITCH	
S907	ESP0001-018	TACT SWITCH	
S908	ESP0001-018	TACT SWITCH	
S909	ESP0001-018	TACT SWITCH	
S910	ESP0001-018	TACT SWITCH	
S911	ESP0001-018	TACT SWITCH	
S912	ESP0001-018	TACT SWITCH	
S913	ESP0001-018	TACT SWITCH	
CI901	ECX0004-194KM	RESONATOR	
FW301	EW3148-45LST	FLAT WIRE	
FW302	EW3158-45LST	FLAT WIRE	
FW303	EW3138-45LST	FLAT WIRE	
FW901	EW3198-40LST	FLAT WIRE	
FW902	EW3178-45KST	FLAT WIRE	
FW903	EW3138-10LST	FLAT WIRE	
FW904	EW3148-45KST	FLAT WIRE	
FW905	EW3148-10LST	FLAT WIRE	
FW906	EW3158-13LST	FLAT WIRE	
FW907	EW3158-085ST	FLAT WIRE	
JT901	EMV7122-003	CONNECTOR	
JT902	EMV7122-004	CONNECTOR	
JT906	EMV7122-004	CONNECTOR	
JT907	EMV7122-004	CONNECTOR	
RT351	ESK8024-212	RELAY	
RT352	ESK5912-214	RELAY	

△ : SAFETY PARTS

■ END-056 □ Power Primary PC Board Ass'y

Note: END-056 □ varies according to the areas employed. See note (1) when placing an order.

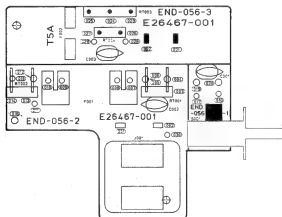

Note (1)

PC Board Ass'y	Designated Areas
END-056 [A]	the U.S.A., Canada
END-056 [B]	Other Countries
END-056 [C]	Australia, Continental Europe, West Germany
END-056 [D] BS	the U.K.

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
C001	0C29038-103	0.01MF	CERAMIC
C001	0C29038-103	0.01MF	CERAMIC
C001	0C29038-103	0.01MF	CERAMIC
C001	0C29038-103BS	0.01MF	CERAMIC

△ : SAFETY PARTS

Others

ITEM	PART NUMBER	DESCRIPTION	AREA
	EW57331-001	FUSE CLIP	
	EW5675-004	FUSE CLIP	A
	E26467-001	CIRCUIT BOARD	
	E26467-001	CIRCUIT BOARD	B
	E26467-001	CIRCUIT BOARD	C
	E26467-001B5	CIRCUIT BOARD	DOS
	E306242-001	WIRE CLAMP	
	E306242-001	WIRE CLAMP	A
	E4508-002	PLATE	B
A J001	EW50437-002	WIRE OUTLET	


Others

A	ITEM	PART NUMBER	DESCRIPTION	AREA
A	J001	0MCD440-001	AC OUTLET	
	RT002	E67764-302	WRAPPING TERMINAL	A
	RT002	E67764-302	WRAPPING TERMINAL	B
	RT002	E67764-203	WRAPPING TERMINAL	C
	RT002	E67764-203	WRAPPING TERMINAL	D
	P 001	USP1106-065	POWER SWITCH	DBS
	B 001	USP1106-065	POWER SWITCH	
	F 001	USP1106-065	POWER SWITCH	
	S 001	USP1106-065	POWER SWITCH	C
	S 001	P1106-0005	POWER SWITCH	DBS

A : SAFETY PARTS

■ ENH-120 □ Power Amplifier PC Board Ass'y

Note: ENH-120 □ varies according to the areas employed. See note (1) when placing an order.

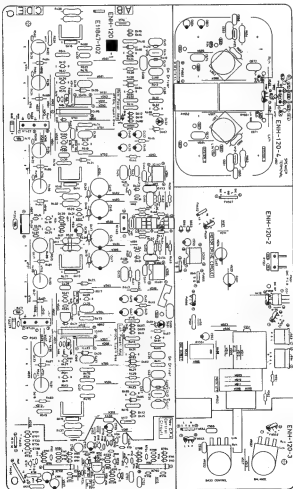

Note (1)

PC Board Ass'y	Designated Areas
ENH-120 [B]	the U.S.A., Canada
ENH-120 [C]	Australia, Continental Europe the U.K., Other Countries
ENH-120 [D]	West Germany

Transistors

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
9401	2SC2910(S,T)	SILICON SANYO	
9402	2SC2910(S,T)	SILICON SANYO	
9403	2SA1208(S,T)	SILICON SANYO	
9404	2SA1208(S,T)	SILICON SANYO	
9405	2SC2910(S,T)	SILICON SANYO	
9406	2SC2910(S,T)	SILICON SANYO	
9407	2SD636(G,R)	SILICON MATSUSHITA	
9408	2SD636(G,R)	SILICON MATSUSHITA	
9409	2SC2909(S,T)	SILICON SANYO	
9410	2SC2909(S,T)	SILICON SANYO	
9411	2SA1207(S,T)	SILICON SANYO	
9412	2SA1207(S,T)	SILICON SANYO	
9413	2SD649A(B,C)	SILICON HITACHI	
9414	2SD649A(B,C)	SILICON HITACHI	
9415	2SD649A(B,C)	SILICON HITACHI	
9416	2SD649A(B,C)	SILICON HITACHI	
9417	2SD2155(L,R,D)	SILICON TOSHIBA	
9418	2SD2155(L,R,D)	SILICON TOSHIBA	
9419	2SD1429(L,R,D)	SILICON TOSHIBA	
9420	2SD1429(L,R,D)	SILICON TOSHIBA	
9421	2SD2155(L,R,D)	SILICON TOSHIBA	
9422	2SD2155(L,R,D)	SILICON TOSHIBA	
9423	2SD1429(L,R,D)	SILICON TOSHIBA	
9424	2SD1429(L,R,D)	SILICON TOSHIBA	
9425	2SD2240(G,R,BL)	SILICON TOSHIBA	
9426	2SD2240(G,R,BL)	SILICON TOSHIBA	
9427	2SA970(G,R,BL)	SILICON TOSHIBA	
9428	2SA970(G,R,BL)	SILICON TOSHIBA	
9429	2SC2909(S,T)	SILICON SANYO	
9430	2SC2909(S,T)	SILICON SANYO	
9431	2SA970(G,R,BL)	SILICON TOSHIBA	
9701	2SD1302(S,T)	SILICON MATSUSHITA	
9702	2SD1302(S,T)	SILICON MATSUSHITA	
9703	2SA1208(S,T)	SILICON SANYO	
9704	DTC114YS	SILICON ROHM	
9705	2SC458(C,D)	SILICON HITACHI	
9706	2SC458(C,D)	SILICON HITACHI	
9707	2SC458(C,D)	SILICON HITACHI	
9708	2SC458(C,D)	SILICON HITACHI	
9709	DTC144ES	SILICON ROHM	

△ : SAFETY PARTS

I.C.s

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
IC405	VC45800V	I.C. DAINICHI	
IC406	VC45800V	I.C. DAINICHI	
IC403	PC837A	I.C. SHARP	
IC404	PC837A	I.C. SHARP	
IC405	VC5022-2	I.C. SANYO	
IC406	VC5022-2	I.C. SANYO	
IC553	LSI639-CV	I.C. SANYO	
IC701	BA15218N	I.C. ROHM	
IC702	BA15218N	I.C. ROHM	

△ : SAFETY PARTS

Diodes

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
D401	R94.7682	ZEVEN NEC	B
D402	R94.7682	ZEVEN NEC	B
D403	158817D	SILICON HITACHI	
D404	158817D	SILICON HITACHI	
D405	158817D	SILICON HITACHI	
D406	158817D	SILICON HITACHI	
D407	158133	SILICON ROHM	
D408	158133	SILICON ROHM	

Diodes

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
D409	158133	SILICON ROHM	
D410	158133	SILICON ROHM	
D411	158133	SILICON ROHM	
D412	158133	SILICON ROHM	
D413	158133	SILICON ROHM	
D414	158133	SILICON ROHM	
D415	158133	SILICON ROHM	
D416	158133	SILICON ROHM	
D417	H215-1LT0	ZEVEN HITACHI	
D418	H215-1LT0	ZEVEN HITACHI	
D419	H215-1LT0	ZEVEN HITACHI	
D420	H215-1LT0	ZEVEN HITACHI	
D421	158133	SILICON ROHM	
D422	158133	SILICON ROHM	
D423	158133	SILICON ROHM	
D424	158133	SILICON ROHM	
D425	158133	SILICON ROHM	
D426	158133	SILICON ROHM	
D427	158133	SILICON ROHM	
D428	158133	SILICON ROHM	
D429	SLR-34MC50F124	L.E.D. ROHM	C
D430	SLR-34MC50F124	L.E.D. ROHM	D
D431	SLR-34MC50F124	L.E.D. ROHM	D
D432	SLR-34MC50F124	L.E.D. ROHM	D
D433	SLR-34MC50F124	L.E.D. ROHM	D
D434	SLR-34MC50F124	L.E.D. ROHM	D
D435	SLR-34MC50F124	L.E.D. ROHM	D
D436	SLR-34MC50F124	L.E.D. ROHM	D
D437	SLR-34MC50F124	L.E.D. ROHM	D
D438	SLR-34MC50F124	L.E.D. ROHM	D
D439	SLR-34MC50F124	L.E.D. ROHM	D
D440	SLR-34MC50F124	L.E.D. ROHM	D
D441	SLR-34MC50F124	L.E.D. ROHM	D
D442	SLR-34MC50F124	L.E.D. ROHM	D
D443	SLR-34MC50F124	L.E.D. ROHM	D
D444	SLR-34MC50F124	L.E.D. ROHM	D
D445	SLR-34MC50F124	L.E.D. ROHM	D
D446	SLR-34MC50F124	L.E.D. ROHM	D
D447	SLR-34MC50F124	L.E.D. ROHM	D
D448	SLR-34MC50F124	L.E.D. ROHM	D
D449	SLR-34MC50F124	L.E.D. ROHM	D
D450	SLR-34MC50F124	L.E.D. ROHM	D
D451	SLR-34MC50F124	L.E.D. ROHM	D
D452	SLR-34MC50F124	L.E.D. ROHM	D
D453	SLR-34MC50F124	L.E.D. ROHM	D
D454	SLR-34MC50F124	L.E.D. ROHM	D
D455	SLR-34MC50F124	L.E.D. ROHM	D
D456	SLR-34MC50F124	L.E.D. ROHM	D
D457	SLR-34MC50F124	L.E.D. ROHM	D
D458	SLR-34MC50F124	L.E.D. ROHM	D
D459	SLR-34MC50F124	L.E.D. ROHM	D
D460	SLR-34MC50F124	L.E.D. ROHM	D
D461	SLR-34MC50F124	L.E.D. ROHM	D
D462	SLR-34MC50F124	L.E.D. ROHM	D
D463	SLR-34MC50F124	L.E.D. ROHM	D
D464	SLR-34MC50F124	L.E.D. ROHM	D
D465	SLR-34MC50F124	L.E.D. ROHM	D
D466	SLR-34MC50F124	L.E.D. ROHM	D
D467	SLR-34MC50F124	L.E.D. ROHM	D
D468	SLR-34MC50F124	L.E.D. ROHM	D
D469	SLR-34MC50F124	L.E.D. ROHM	D
D470	SLR-34MC50F124	L.E.D. ROHM	D
D471	SLR-34MC50F124	L.E.D. ROHM	D
D472	SLR-34MC50F124	L.E.D. ROHM	D
D473	SLR-34MC50F124	L.E.D. ROHM	D
D474	SLR-34MC50F124	L.E.D. ROHM	D
D475	SLR-34MC50F124	L.E.D. ROHM	D
D476	SLR-34MC50F124	L.E.D. ROHM	D
D477	SLR-34MC50F124	L.E.D. ROHM	D
D478	SLR-34MC50F124	L.E.D. ROHM	D
D479	SLR-34MC50F124	L.E.D. ROHM	D
D480	SLR-34MC50F124	L.E.D. ROHM	D
D481	SLR-34MC50F124	L.E.D. ROHM	D
D482	SLR-34MC50F124	L.E.D. ROHM	D
D483	SLR-34MC50F124	L.E.D. ROHM	D
D484	SLR-34MC50F124	L.E.D. ROHM	D
D485	SLR-34MC50F124	L.E.D. ROHM	D
D486	SLR-34MC50F124	L.E.D. ROHM	D
D487	SLR-34MC50F124	L.E.D. ROHM	D
D488	SLR-34MC50F124	L.E.D. ROHM	D
D489	SLR-34MC50F124	L.E.D. ROHM	D
D490	SLR-34MC50F124	L.E.D. ROHM	D
D491	SLR-34MC50F124	L.E.D. ROHM	D
D492	SLR-34MC50F124	L.E.D. ROHM	D
D493	SLR-34MC50F124	L.E.D. ROHM	D
D494	SLR-34MC50F124	L.E.D. ROHM	D
D495	SLR-34MC50F124	L.E.D. ROHM	D
D496	SLR-34MC50F124	L.E.D. ROHM	D
D497	SLR-34MC50F124	L.E.D. ROHM	D
D498	SLR-34MC50F124	L.E.D. ROHM	D
D499	SLR-34MC50F124	L.E.D. ROHM	D
D500	SLR-34MC50F124	L.E.D. ROHM	D

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
		MAKER	
C401	EF20101-1015	100PF M.NTLAR	
C402	EF20101-1015	100PF M.NTLAR	
C403	EF20101-220	220PF M.NTLAR	
C404	EF20101-220	220PF M.NTLAR	
C405	EF20101-220	220PF M.NTLAR	
C406	EF20101-220	220PF M.NTLAR	
C407	EF20101-220	220PF M.NTLAR	
C408	EF20101-220	220PF M.NTLAR	
C409	EF20101-4725	4700PF M.NTLAR	
C410	EF20101-4725	4700PF M.NTLAR	
C411	EF20101-4725	4700PF M.NTLAR	
C412	EF20101-4725	4700PF M.NTLAR	
C413	EF20101-4725	4700PF M.NTLAR	
C414	EF20101-4725	4700PF M.NTLAR	
C415	EF20101-4725	4700PF M.NTLAR	
C416	EF20101-4725	4700PF M.NTLAR	
C417	EF20101-4725	4700PF M.NTLAR	
C418	EF20101-4725	4700PF M.NTLAR	
C419	EF20101-4725	4700PF M.NTLAR	
C420	EF20101-4725	4700PF M.NTLAR	
C421	EF20101-4725	4700PF M.NTLAR	
C422	EF20101-4725	4700PF M.NTLAR	
C423	EF20101-4725	4700PF M.NTLAR	
C424	EF20101-4725	4700PF M.NTLAR	
C425	EF20101-4725	4700PF M.NTLAR	
C426	EF20101-4725	4700PF M.NTLAR	
C427	EF20101-4725	4700PF M.NTLAR	
C428	EF20101-4725	4700PF M.NTLAR	
C429	EF20101-4725	4700PF M.NTLAR	
C430	EF20101-4725	4700PF M.NTLAR	
C431	EF20101-4725	4700PF M.NTLAR	
C432	EF20101-4725	4700PF M.NTLAR	
C433	EF20101-4725	4700PF M.NTLAR	
C434	EF20101-4725	4700PF M.NTLAR	
C435	EF20101-4725	4700PF M.NTLAR	
C436	EF20101-4725	4700PF M.NTLAR	
C437	EF20101-4725	4700PF M.NTLAR	
C438	EF20101-4725	4700PF M.NTLAR	
C439	EF20101-4725	4700PF M.NTLAR	
C440	EF20101-4725	4700PF M.NTLAR	
C441	EF20101-4725	4700PF M.NTLAR	
C442	EF20101-4725	4700PF M.NTLAR	
C443	EF20101-4725	4700PF M.NTLAR	
C444	EF20101-4725	4700PF M.NTLAR	
C445	EF20101-4725	4700PF M.NTLAR	
C446	EF20101-4725	4700PF M.NTLAR	
C447	EF20101-4725	4700PF M.NTLAR	
C448	EF20101-4725	4700PF M.NTLAR	
C449	EF20101-4725	4700PF M.NTLAR	
C450	EF20101-4725	4700PF M.NTLAR	
C451	EF20101-4725	4700PF M.NTLAR	
C452	EF20101-4725	4700PF M.NTLAR	
C453	EF20101-4725	4700PF M.NTLAR	
C454	EF20101-4725	4700PF M.NTLAR	
C455	EF20101-4725	4700PF M.NTLAR	
C456	EF20101-4725	4700PF M.NTLAR	
C457	EF20101-4725	4700PF M.NTLAR	
C458	EF20101-4725	4700PF M.NTLAR	
C459	EF20101-4725	4700PF M.NTLAR	
C460	EF20101-4725	4700PF M.NTLAR	
C461	EF20101-4725	4700PF M.NTLAR	
C462	EF20101-4725	4700PF M.NTLAR	
C463	EF20101-4725	4700PF M.NTLAR	
C464	EF20101-4725	4700PF M.NTLAR	
C465	EF20101-4725	4700PF M.NTLAR	
C466	EF20101-4725	4700PF M.NTLAR	
C467	EF20101-4725	4700PF M.NTLAR	
C468	EF20101-4725	4700PF M.NTLAR	
C469	EF20101-4725	4700PF M.NTLAR	
C470	EF20101-4725	4700PF M.NTLAR	
C471	EF20101-4725	4700PF M.NTLAR	
C472	EF20101-4725	4700PF M.NTLAR	
C473	EF20101-4725	4700PF M.NTLAR	
C474	EF20101-4725	4700PF M.NTLAR	
C475	EF20101-4725	4700PF M.NTLAR	
C476	EF20101-4725	4700PF M.NTLAR	
C477	EF20101-4725	4700PF M.NTLAR	
C478	EF20101-4725	4700PF M.NTLAR	
C479	EF20101-4725	4700PF M.NTLAR	
C480	EF20101-4725	4700PF M.NTLAR	
C481	EF20101-4725	4700PF M.NTLAR	
C482	EF20101-4725	4700PF M.NTLAR	
C483	EF20101-4725	4700PF M.NTLAR	
C484	EF20101-4725	4700PF M.NTLAR	
C485	EF20101-4725	4700PF M.NTLAR	
C486	EF20101-4725	4700PF M.NTLAR	
C487	EF20101-4725	4700PF M.NTLAR	
C488	EF20101-4725	4700PF M.NTLAR	
C489	EF20101-4725	4700PF M.NTLAR	
C490	EF20101-4725	4700PF M.NTLAR	
C491	EF20101-4725	4700PF M.NTLAR	
C492	EF20101-4725	4700PF M.NTLAR	
C493	EF20101-4725	4700PF M.NTLAR	
C494	EF20101-4725	4700PF M.NTLAR	
C495	EF20101-4725	4700PF M.NTLAR	
C496	EF20101-4725	4700PF M.NTLAR	
C497	EF20101-4725	4700PF M.NTLAR	
C498	EF20101-4725	4700PF M.NTLAR	
C499	EF20101-4725	4700PF M.NTLAR	
C500	EF20101-4725	4700PF M.NTLAR	

△ : SAFETY PARTS

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
C458	EF20101-2225	2200PF 25V M.MYLAR	
C552	SCB81E7-223	D.022MF 25V CERAMIC	
C552	SEB11H-105	10M 50V ELECTRO	
C553	SEB11H-107	100MF 50V ELECTRO	
C554	GFVB1HJ-104	D.1MF 50V T.FILM	
C555	GFVB1HJ-104	D.1MF 50V T.FILM	
C653	SEB11H-105	10M 50V ELECTRO	
C654	SEB11H-105	10M 50V ELECTRO	
C655	GFVB1HJ-104	D.1MF 50V T.FILM	
C656	GFVB1HJ-104	D.1MF 50V T.FILM	
C657	GFVB1HJ-104	D.1MF 50V T.FILM	
C673	GFVB1HJ-103	D.01MF 50V T.FILM	8
C672	GFVB1HJ-103	D.01MF 50V T.FILM	8
C673	GFVB1HJ-103	D.01MF 50V T.FILM	3
C674	GFVB1HJ-103	D.01MF 50V T.FILM	3
C701	GFNB1HJ-223	D.022MF 50V MYLAR	
C702	GFNB1HJ-223	D.022MF 50V MYLAR	
C703	SEB11E-106	10MF 25V ELECTRO	
C705	SEB11E-107	100MF 25V ELECTRO	
C706	SEB11E-107	100MF 25V ELECTRO	
C707	SEB11E-106	10MF 25V ELECTRO	
C708	SEB11E-476	47MF 25V ELECTRO	

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R401	QR0167J-684	680K 1/4W CARBON	
R402	QR0167J-684	680K 1/4W CARBON	
R403	ER0141J-1015	100 1/4W CARBON	
R404	ER0141J-1015	100 1/4W CARBON	
R405	ER0141J-1015	100 1/4W CARBON	
R406	ER0141J-1015	100 1/4W CARBON	
R407	ER0141J-2225	2.2K 1/4W CARBON	
R408	ER0141J-2225	2.2K 1/4W CARBON	
R409	QR0141C-8205	82 1/4W UNF. CARBON B	
R410	QR0077J-820	82 1/4W FUSIBLE D	
R410	QR0077J-820	82 1/4W FUSIBLE G	
R410	QR0077J-820	82 1/4W FUSIBLE D	
R411	QR0077J-330	33 1/4W FUSIBLE C	
R411	QR0077J-330	33 1/4W FUSIBLE C	
R411	QR0077J-330	33 1/4W FUSIBLE C	
R412	QR0141C-1015	100 1/4W UNF. CARBON B	
R412	QR0077J-330	33 1/4W FUSIBLE C	
R412	QR0077J-330	33 1/4W FUSIBLE D	
R413	QR0141C-8205	82 1/4W UNF. CARBON B	
R413	QR0077J-470	47 1/4W FUSIBLE C	
R413	QR0077J-470	47 1/4W FUSIBLE D	
R414	QR0141C-4705	47 1/4W UNF. CARBON B	
R414	QR0077J-470	47 1/4W FUSIBLE C	
R414	QR0077J-470	47 1/4W FUSIBLE D	
R415	QR0141C-8205	82 1/4W UNF. CARBON B	
R415	QR0077J-820	82 1/4W FUSIBLE C	
R415	QR0077J-820	82 1/4W FUSIBLE D	
R416	QR0141C-8205	82 1/4W UNF. CARBON B	
R416	QR0077J-820	82 1/4W FUSIBLE C	
R416	QR0077J-820	82 1/4W FUSIBLE D	
R417	QR0167J-562	5.6K 1/4W CARBON	
R418	QR0167J-562	5.6K 1/4W CARBON	
R419	QR0167J-562	5.6K 1/4W CARBON	
R420	QR0167J-562	5.6K 1/4W CARBON	
R421	QR0141C-1215	120 1/4W UNF. CARBON	
R422	QR0141C-1215	120 1/4W UNF. CARBON	
R423	QR0141C-1215	120 1/4W UNF. CARBON	
R424	QR0141C-1215	120 1/4W UNF. CARBON	
R425	QR0141C-8K25	8.2 1/4W UNF. CARBON B	
R426	QR0141C-8K25	8.2 1/4W UNF. CARBON B	
R427	ER0141J-2235	22K 1/4W CARBON	
R428	ER0141J-2235	22K 1/4W CARBON	
R429	ER0141J-2235	22K 1/4W CARBON	
R430	ER0141J-2235	22K 1/4W CARBON	
R431	QR0022J-272A	2.7K 2W D.N. FILM	
R432	QR0022J-272A	2.7K 2W D.N. FILM	
R433	QR0167J-475	4.7K 1/4W CARBON	
R434	QR0167J-475	4.7K 1/4W CARBON	
R435	QR0167J-333	33K 1/4W CARBON	
R436	QR0167J-333	33K 1/4W CARBON	
R437	QR0022J-272A	2.7K 2W D.N. FILM	
R438	QR0022J-272A	2.7K 2W D.N. FILM	
R441	ER0141J-3225	32K 1/4W CARBON	
R442	ER0141J-2225	2.2K 1/4W CARBON	
R443	ER0141J-1055	10M 1/4W CARBON	
R444	ER0141J-1055	10M 1/4W CARBON	
R445	ER0141J-1055	10M 1/4W CARBON	
R446	ER0141J-1055	10M 1/4W CARBON	

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R447	ER0141J-1235	12K 1/4W CARBON	
R448	ER0141J-1235	12K 1/4W CARBON	
R449	ER0141J-1525	1.5K 1/4W CARBON	
R450	ER0141J-1525	1.5K 1/4W CARBON	
R451	ER0141J-1515	150 1/4W CARBON	
R452	ER0141J-1515	150 1/4W CARBON	
R461	GVF601-202	2K 0.15W VARIABLE	
R462	GVF601-202	2K 0.15W VARIABLE	
R463	QR0167J-101	100 1/4W CARBON	
R464	QR0167J-101	100 1/4W CARBON	
R465	ER0167J-3515	350 1/4W THERMISTOR	
R466	ER0167J-3515	350 1/4W THERMISTOR	
R467	QR0167J-332	3.3K 1/4W CARBON	
R468	QR0167J-332	3.3K 1/4W CARBON	
R469	QR0167J-561	560 1/4W CARBON	
R470	QR0167J-561	560 1/4W CARBON	
R471	SR0250	250 1/4W THERMISTOR C	
R472	SR0250	250 1/4W THERMISTOR C	
R473	SR0250	250 1/4W THERMISTOR C	
R473	QR0077J-271	270 1/4W FUSIBLE D	
R473	QR0077J-271	270 1/4W FUSIBLE D	
R474	QR0141C-2715	270 1/4W UNF. CARBON B	
R474	QR0077J-271	270 1/4W FUSIBLE C	
R474	QR0077J-271	270 1/4W FUSIBLE D	
R475	QR0141C-2715	270 1/4W UNF. CARBON B	
R475	QR0077J-271	270 1/4W FUSIBLE C	
R475	QR0077J-271	270 1/4W FUSIBLE D	
R476	QR0141C-2715	270 1/4W UNF. CARBON B	
R476	QR0077J-271	270 1/4W FUSIBLE C	
R476	QR0077J-271	270 1/4W FUSIBLE D	
R477	QR0077J-487	4.7 1/4W FUSIBLE C	
R477	QR0077J-487	4.7 1/4W FUSIBLE D	
R478	QR0141C-4875	4.7 1/4W UNF. CARBON B	
R478	QR0077J-487	4.7 1/4W FUSIBLE C	
R479	QR0141C-4875	4.7 1/4W UNF. CARBON B	
R479	QR0077J-487	4.7 1/4W FUSIBLE C	
R479	QR0077J-487	4.7 1/4W FUSIBLE D	
R480	QR0141C-4875	4.7 1/4W UNF. CARBON B	
R480	QR0077J-487	4.7 1/4W FUSIBLE C	
R480	QR0077J-487	4.7 1/4W FUSIBLE D	
R481	QR0125J-282	2.2 1/2W UNF. CARBON B	
R482	QR0125J-282A	0.22 1W M.FILM C	
R482	QR0125J-282A	0.22 1W M.FILM D	
R482	QR0125J-282	0.22 1/2W UNF. CARBON B	
R482	QR0125J-282A	0.22 1W M.FILM C	
R482	QR0125J-282A	0.22 1W M.FILM D	
R483	QR0125J-282	0.22 1/2W UNF. CARBON B	
R483	QR0125J-282A	0.22 1W M.FILM C	
R483	QR0125J-282A	0.22 1W M.FILM D	
R484	QR0125J-282	0.22 1/2W UNF. CARBON B	
R484	QR0125J-282A	0.22 1W M.FILM C	
R484	QR0125J-282A	0.22 1W M.FILM D	
R485	QR0125J-282	0.22 1/2W UNF. CARBON B	
R485	QR0125J-282A	0.22 1W M.FILM C	
R485	QR0125J-282A	0.22 1W M.FILM D	
R486	QR0125J-282	0.22 1/2W UNF. CARBON B	
R486	QR0125J-282A	0.22 1W M.FILM C	
R486	QR0125J-282A	0.22 1W M.FILM D	
R487	QR0125J-282	0.22 1/2W UNF. CARBON B	
R487	QR0125J-282A	0.22 1W M.FILM C	
R487	QR0125J-282A	0.22 1W M.FILM D	
R488	QR0125J-282	0.22 1/2W UNF. CARBON B	
R488	QR0125J-282A	0.22 1W M.FILM C	
R488	QR0125J-282A	0.22 1W M.FILM D	
R489	ER0001-822	0.22 3W EMITTER	
R490	ER0001-822	0.22 3W EMITTER	
R491	ER0001-822	0.22 3W EMITTER	
R492	ER0001-822	0.22 3W EMITTER	
R493	ER0001-822	0.22 3W EMITTER	
R494	ER0001-822	0.22 3W EMITTER	
R495	ER0001-822	0.22 3W EMITTER	
R496	ER0001-822	0.22 3W EMITTER	
R497	QR0167J-100	10 1/4W CARBON	
R498	QR0167J-100	10 1/4W CARBON	
R499	QR0167J-100	10 1/4W CARBON	
R500	QR0167J-100	10 1/4W CARBON	
R501	QR0167J-621	620 1/4W CARBON	
R502	QR0167J-621	620 1/4W CARBON	
R503	QR0167J-621	620 1/4W CARBON	
R504	QR0167J-621	620 1/4W CARBON	
R505	QR0167J-271	270 1/4W CARBON	

A : SAFETY PARTS

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R506	88P167J-271	270 1/6W CARBON	
R507	88P167J-820	82 1/6W CARBON	
R508	88P167J-820	82 1/6W CARBON	
R509	88P167J-820	82 1/6W CARBON	
R510	88P167J-820	82 1/6W CARBON	
R511	88P167J-182	1.8K 1/4W FUSIBLE C	
R512	88P167J-182	1.8K 1/4W FUSIBLE D	
R513	88P167J-182S	1.8K 1/4W UNF. CARBON B	
R514	88P167J-182	1.8K 1/4W FUSIBLE C	
R515	88P167J-182	1.8K 1/4W FUSIBLE D	
R516	88P167J-151S	150 1/4W UNF. CARBON B	
R517	88P167J-151	150 1/4W FUSIBLE C	
R518	88P167J-151	150 1/4W FUSIBLE D	
R519	88P167J-151	150 1/4W FUSIBLE D	
R520	88P167J-151	150 1/4W FUSIBLE D	
R521	88P167J-151	150 1/4W FUSIBLE D	
R522	88P167J-2R2S	2.2 1/4W NETWORK B	
R523	88P167J-2R2	2.2 1/4W FUSIBLE C	
R524	88P167J-2R2	2.2 1/4W FUSIBLE D	
R525	88P167J-2R2S	2.2 1/4W NETWORK B	
R526	88P167J-2R2	2.2 1/4W FUSIBLE C	
R527	88P167J-2R2	2.2 1/4W FUSIBLE D	
R528	88P167J-100S	10 1/4W UNF. CARBON B	
R529	88P167J-100	10 1/4W FUSIBLE C	
R530	88P167J-100	10 1/4W FUSIBLE D	
R531	88P167J-100	10 1/4W FUSIBLE D	
R532	88P167J-100	10 1/4W FUSIBLE D	
R533	88P167J-100	10 1/4W FUSIBLE D	
R534	88P167J-100S	10 1/4W UNF. CARBON B	
R535	88P167J-100	10 1/4W FUSIBLE C	
R536	88P167J-100	10 1/4W FUSIBLE D	
R537	88P167J-100	10 1/4W FUSIBLE D	
R538	88P167J-100S	10 1/4W UNF. CARBON B	
R539	88P167J-100	10 1/4W FUSIBLE C	
R540	88P167J-100	10 1/4W FUSIBLE D	
R541	88P167J-100	10 1/4W FUSIBLE D	
R542	88P167J-100S	10 1/4W UNF. CARBON B	
R543	88P167J-100	10 1/4W FUSIBLE C	
R544	88P167J-100	10 1/4W FUSIBLE D	
R545	88P167J-100	10 1/4W FUSIBLE D	
R546	88P167J-100S	10 1/4W UNF. CARBON B	
R547	88P167J-100	10 1/4W FUSIBLE C	
R548	88P167J-100	10 1/4W FUSIBLE D	
R549	88P167J-100	10 1/4W FUSIBLE D	
R550	88P167J-100S	10 1/4W UNF. CARBON B	
R551	88P167J-100	10 1/4W FUSIBLE C	
R552	88P167J-100	10 1/4W FUSIBLE D	
R553	88P167J-100	10 1/4W FUSIBLE D	
R554	88P167J-100S	10 1/4W UNF. CARBON B	
R555	88P167J-100	10 1/4W FUSIBLE C	
R556	88P167J-100	10 1/4W FUSIBLE D	
R557	88P167J-100	10 1/4W FUSIBLE D	
R558	88P167J-100S	10 1/4W UNF. CARBON B	
R559	88P167J-100	10 1/4W FUSIBLE C	
R560	88P167J-100	10 1/4W FUSIBLE D	
R561	88P167J-100	10 1/4W FUSIBLE D	
R562	88P167J-100S	10 1/4W UNF. CARBON B	
R563	88P167J-100	10 1/4W FUSIBLE C	
R564	88P167J-100	10 1/4W FUSIBLE D	
R565	88P167J-100	10 1/4W FUSIBLE D	
R566	88P167J-100S	10 1/4W UNF. CARBON B	
R567	88P167J-100	10 1/4W FUSIBLE C	
R568	88P167J-100	10 1/4W FUSIBLE D	
R569	88P167J-100	10 1/4W FUSIBLE D	
R570	88P167J-224	220K 1/6W CARBON	
R702	88P167J-224	220K 1/6W CARBON	
R703	88P167J-224	220K 1/6W CARBON	
R704	88P167J-224	220K 1/6W CARBON	
R705	88P167J-224	220K 1/6W CARBON	
R706	88P167J-224	220K 1/6W CARBON	
R707	88P167J-224	220K 1/6W CARBON	
R708	88P167J-224	220K 1/6W CARBON	
R709	88P167J-224	220K 1/6W CARBON	
R710	88P167J-224	220K 1/6W CARBON	
R711	88P167J-224	220K 1/6W CARBON	
R712	88P167J-224	220K 1/6W CARBON	
R713	88P167J-224	220K 1/6W CARBON	
R714	88P167J-224	220K 1/6W CARBON	
R715	88P167J-224	220K 1/6W CARBON	
R716	88P167J-224	220K 1/6W CARBON	
R717	88P167J-224	220K 1/6W CARBON	

RESISTORS


ITEM	PART NUMBER	DESCRIPTION	AREA
A	R735	QRD167J-333	33K 1/6W CARBON
	R736	QRD167J-332	5.3K 1/6W CARBON
	R737	QRD14CJ-4715	470 1/4W UNF. CARBON
	R738	QRD14CJ-3915	390 1/4W UNF. CARBON
	VR551	QVDB87W-F5F9	250K VARIABLE
	VR552	QVDB87A-E240	20K VARIABLE
VR553	QVDB942-E158	100K VARIABLE	

Others

ITEM	PART NUMBER	DESCRIPTION	AREA
	BUSH-PUL	BUSHING	
	EW7031-071	TERMINAL WIRE	D
	EW7031-088	TERMINAL WIRE	D
	EW7031-117	TERMINAL WIRE	
	E11847-102	CIRCUIT BOARD	
	E304366-005	HEAT SINK	
	E304392-001	BRACKET	
	E304393-002	WIRE CLAMP	
	E305489-001	COVER	B
	E33754-001	TRI BAND	
	E30670-005	WIRE CLAMP	
	E70309-002	WIRE CLAMP	
	E70859-001	EARTH PLATE	D
	E72018-002	WIRE CLAMP	
	E73525-001	SCREW	
	E73498-001	SCREW	
	E74265-001	BRACKET	
	E74266-002	SPECIAL SCREW	D
	E75019-001	VOLUME BRACKET	
	98923008CC	SCREW	
	98923008CC	SCREW	
	98923008CC	SCREW	
	98923008CC	SCREW	
	98923008CC	SCREW	B
	98923012CC	SCREW	
	98927604H	SCREW	
J401	EW7122-005	CONNECTOR	
J402	EW7122-003	CONNECTOR	
J551	EW55004-003K	PLUG ASSY	
J553	EW7122-003R	CONNECTOR	
J554	EW7122-004R	CONNECTOR	
J451	EW7122-003	CONNECTOR	
J452	EW8077P-801F	SPEAKER TERMINAL	
L651	EL00003-180	INDUCTOR	
L652	EL00003-180	INDUCTOR	
FW401	EW232C-16LT	FLAT WIRE	
FW402	EW233B-16LT	FLAT WIRE	
FW403	EW233B-55KT	FLAT WIRE	
FW404	EW236B-40LT	FLAT WIRE	
FW532	EW235C-18LT	FLAT WIRE	
FW533	EW232C-25JH	FLAT WIRE	
FW534	EW234B-25KT	FLAT WIRE	
FW535	EW233B-40LT	FLAT WIRE	
FW536	EW233B-75LT	FLAT WIRE	
FW537	EW233B-08LT	FLAT WIRE	
FW551	EW232C-08MH	FLAT WIRE	
FW552	EW232C-40LH	FLAT WIRE	
FW652	EW236B-13LT	FLAT WIRE	
RT401	E47744-503	WRAPPING TERMINAL	
RT402	E47744-503	WRAPPING TERMINAL	
RT403	E47744-102	WRAPPING TERMINAL	
RY551	EKS5024-214	RELAY	
RV401	EKS5024-214	RELAY	
RV552	EKS5024-214	RELAY	
TP401	EW55005-005K	PLUG ASSY	D
	EW7011-071L	WIRE ASSY	D
	EW7011-088R	WIRE ASSY	D

Δ : SAFETY PARTS

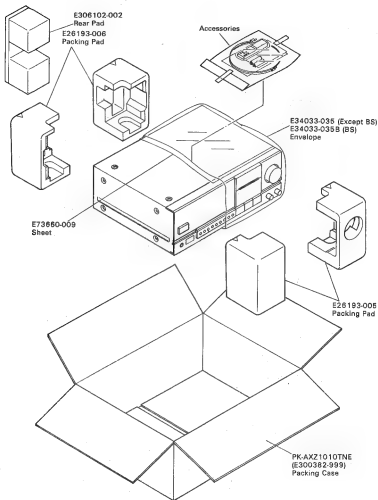


Packing Materials and Part Numbers



The Marks for Designated Areas

J.....the U.S.A.	G.....West Germany
C.....Canada	BS.....the U.K.
A.....Australia	U.....Other Countries
E,EF.....Continental Europe	No mark indicates all areas.

Accessories List

	Part Number	Part Name	Q'ty	Description	Areas
	E30580-1540A E30580-1540AB5 BT-20048C BT-20025K BT-20117	Instruction Book Instruction Book Warranty Card Warranty Card Warranty Card	1 1 1 1 1		Except B5 B5 J C G
	BT20029C BT20060 BT20044F BT2010B BT20071A	Warranty Card Warranty Card Safety Instruction Sheet Service Information Card Service Center List	1 1 1 1 1		A B5 J J C
	BT20098 BT20066A TOCP172-1MB-JV E72360-001  QMF51A2-100J1	Audio Warranty ECC Agency Optical Fiber Caution Sheet Fuse	1 1 1 1 1	for New Zealand F003	A B5 C U
	E67142-T10R0 E04056 E35497-015 QZL1008-001 E43486-340A	Fuse Label Siemens Plug Caution Sheet FTZ Information Sheet Safety Sheet	1 1 1 1 1	220V	U U U G B5
	RM-5A1010U UM-3(DJ)-2PSA E66416-003 E6581-4 E41202-2 E41202-2B	Remote Controller Battery Envelope Envelope Envelope Envelope	1 1 1 1 1 1	for Instruction Book for Instruction Book	J U Except B5 B5




 Safety Parts

The Marks for Designated Areas

J-----the U.S.A.
C-----Canada
A-----Australia
E,EF-----Continental Europe
G-----West Germany
B5-----the U.K.
U-----Other Countries
No mark indicates all areas.

Schematic Diagrams

■ Power Supply and System Control Section


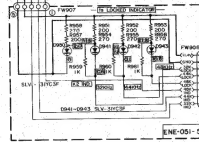





Voltage Entry Mode

SOURCE FUNCTION — DIGITAL 1
DIGITAL TAPE MONITOR — OFF
ANALOG TAPE MONITOR — OFF
DAC DIRECT — OFF
SPK 1 — ON
SPK 2 — OFF
INPUT — OFF (TAPE 44, 100, DIGITAL ZERO)
COMPU LINK MODE
CD — ANALOG
DAT — ANALOG

1. — indicates positive B power supply.
2. — indicates negative B power supply.
3. — shows DC voltage to the chassis with no signal input.
4. — indicates signal path.
5. When replacing the parts in the darkened area () and those marked with Δ , be sure to use the designated parts to ensure safety.
6. This is the standard circuit diagram.

The design and contents are subject to change without notice.

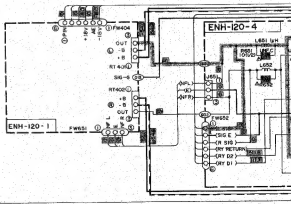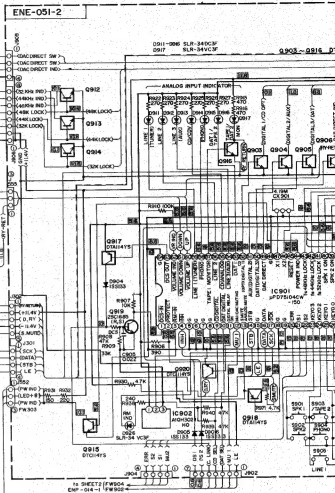

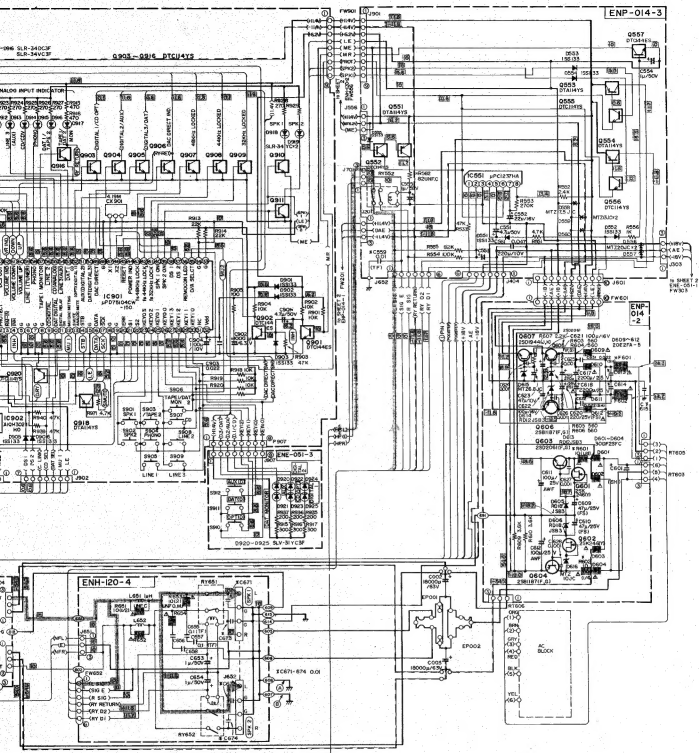

OTN

Schematic Diagrams

Source Input and Power Amplifier Section

